



Head Office
62 Parkhurst Drive
Knoxfield VIC 3180
Telephone: +61 3 9887 2131
Facsimile: +61 3 9887 4931

New South Wales
Factory 2/20-22 Foundry Road
Seven Hills NSW 2147
Telephone: +61 2 9838 0000
Facsimile: +61 2 9838 0466

Queensland
Unit 1/8 Reichert Drive
Molendinar QLD 4214
Telephone: +61 7 5679 6821
Facsimile: + 61 7 5679 0453

VACUUM RELIEF VALVE (VACREL)

If the Vacrel leaks it may have some type of foreign material under the silicone rubber. ie Stick, leaf, spider etc.

To clean this unit:

- Unscrew the Valve body from the main body of the Vacrel. (grip points included on this part)
- Simply clean out the Underside of the umbrella lip (soft rubber) on the valve and remove any foreign material.
- Replace the valve body ensuring that the O-ring is still in place
- Replace Vacrel onto your solar system

Should you continue having an issue with leaks on the valve please contact your local Sunlover Heating Office during business hours for assistance.