


## REPAIR KIT INSTRUCTIONS

### PIN HOLE LEAK

Isolate affected solar tube and cut the tube at leak.


Using water based lubricant, lightly spray area with lubricant and insert small joining barb into each end of the tube pushing them firmly together.

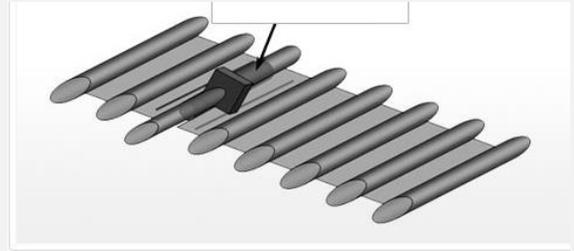

### TEAR LEAK

Isolate affected solar tube and cut to remove damaged section.

Using water based lubricant, lightly spray in tube with lubricant and insert small joining barb into each end of the tube pushing them firmly together.

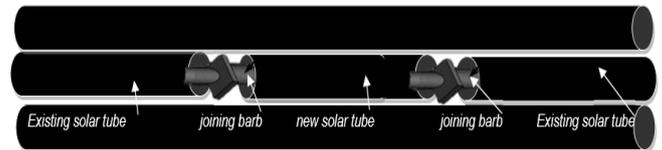

Place small section of tubing (supplied in kit) and repeat process.

### BROKEN MANIFOLD

If a barb at the back molded manifold is broken, remove the affected barb and clean area.


Use a 5mm drill bit and carefully drill out the hole.

Using the grey grommet (supplied in kit) gently place into the hole.

Using water based lubricant, lightly spray area with lubricant and insert small joining barb.

Then join the solar tube back onto the other end of the joining barb.

If the broken barb cannot be removed from the tube, cut the appropriate length off and place barb into tube and connect to manifold

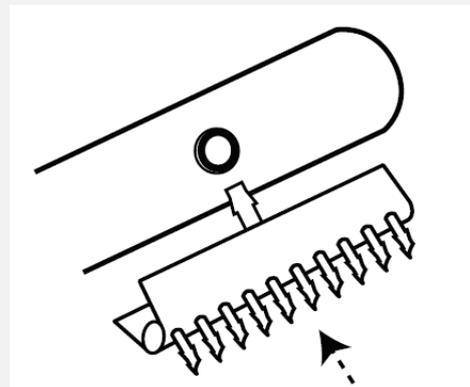

### REPAIR KIT CONTENTS

- 10x Individual Solar Tubing
- 10x Barbs
- 20x Sleeves
- 5x Small Grommets
- 5x Standard Grommets

