

CX Premium Salt & Mineral Chlorinator

Chlorinator INSTALLATION AND OPERATION MANUAL

oasisaquatics.com.au Part of the (sunlover group Head Office 62 Parkhurst Dr Knoxfield VIC 3180 T: 03 9887 2131 New South Wales Unit 2, 10 Boden Rd, Seven Hills NSW 2147 T: 02 9838 0000 Queensland Unit 4, 8 Reichert Dr Molendinar QLD 4214 T: 07 5679 6821

info@oasisaquatics.com.au oasisaquatics.com.au

TABLE OF CONTENTS

1.	IMPORTANT WARNINGS & SAFETY INSTRUCTIONS	. 3
	1.1 Important Warnings	. 3
	1.2 Important Safety Instructions	. 3
	1.3 General Warnings	. 3
2.	GENERAL OVERVIEW	. 4
	2.1 Recommendations and Helpful Hints	. 5
	2.2 Contents	. 5
	2.3 Tools Needed	. 5
3.	POOL PREPARATION	. 6
4.	POWER PACK AND CELL INSTALLATION	. 7
	4.1 Power Pack Installation	. 7
	4.2 Cell Electrode Installation	. 7
	4.3 Installation Diagram	. 8
5.	INITIAL START UP OF YOUR UNIT	. 9
	5.1 Initial Start Up	. 9
	5.2 Start Up Clock Set	. 9
	5.3 Start Up Run Period	. 9
	5.4 Start Up Information	. 9
	5.5 Mineral or Salt Mix	10
	5.6 Default Display Screen	10
6.	CONTROL PANEL OPERATION	11
	6.1 OK BUTTON	11
	6.2 POWER/MODE	12
	6.3 CHLOR BOOST	12
	6.4 WINTER / BLANKET MODE	13
	6.5 CLOCK/TIMER	13
	6.51 Clock Settings	13
	6.52 Timer Settings	14
	6.6 SALT TEST	15
	6.7 BACKWASH	16

7.	U	NIT MENU GUIDE	17
	7.1	Backwash	17
	7.2	Brightness	17
	7.3	Cell Cleaning	17
	7.4	Chlor Boost	17
	7.5	Chlor Setting	17
	7.6	Clock/Timer	17
	7.7	Contrast	18
	7.8	Power/Mode	18
	7.9	Pump Setting	18
	7.10) Salt Test	18
	7.11	Service Menu	18
	7.12	2 Spa Mode	18
	7.13	Winter / Blanket Mode	18
8.	W	ATER CHEMISTRY	19
	8.1	Chlorine	19
	8.2	Salt	19
	8.3	pH	20
	8.4	Total Alkalinity	20
	8.5	Calcium Hardness	20
	8.6	Stabiliser	20
9.	С	HLORINATOR MAINTENANCE	21
	9.1	Inspecting and Cleaning the Cell Electrode	21
	9.2	Inspecting the Power Pack	22
1().	SYSTEM TROUBLESHOOTING	23
11	1.	SCHEMATICS AND PART NUMBERS	26
12	2.	SPECIFICATION TABLE	29
13	3.	WARRANTY	29
14	4.	TECHNICAL SUPPORT	30
15	5.	NOTES	31

1. IMPORTANT WARNINGS & SAFETY INSTRUCTIONS

1.1 Important Warnings

This manual contains important information about the installation, operation and safe use of this product. This information should be given to the owner and/or operator of this equipment. When installing and using this electrical equipment, basic safety precautions should always be followed. Failure to follow safety warnings and instructions in this manual can result in serious injury and/or damage to your equipment. Read and follow all warning notices and instructions which are included in this manual.

The Power Supply internally contains live components. There is a danger of electric shock if opened. If the power cord is damaged then it should be replaced by the manufacturer, their agent or similar.

1.2 Important Safety Instructions



To reduce the risk of injury, **DO NOT** permit young children to use this product unless they have been trained by the person responsible for their safety and they acknowledge their ability to use such equipment. To reduce the risk of accidents or incidents, service on the unit should only be performed by your local pool Professional.

1.3 General Warnings



When mixing acid with water,

ALWAYS ADD ACID TO WATER. NEVER ADD WATER TO ACID.



DO NOT PLUG UNIT IN IF CARTON HAS BEEN WET.



GAS BUILDUP CAN OCCUR WITH IMPROPER WIRING: To reduce the risk of personal injury the Power Pack is designed so that the Electrolytic Cell will only receive power when the pool pump is on. Otherwise, dangerous chlorine gas build-up can occur. If the pump is not installed to the AC Socket (pump outlet) on the Power Pack then the installer must ensure that the Electrolytic Cell is never energised when the pool pump is OFF or water is not flowing through the unit.



Congratulations on your recent purchase of your Oasis CX Premium Salt & Mineral Chlorinator Please take a moment to read through the entire manual before installing your new unit. Your chlorinator must be installed and operated as specified.

While every effort has been made to ensure that the information contained in this guide is accurate and complete, no liability can be accepted for any errors or omissions. **OASIS AQUATICS Pty Ltd** reserves the right to change the specification of the hardware and software described herein at any time without prior notice.

Please remember that your Oasis CX Premium Salt & Mineral Chlorinator is not designed to chemically maintain your pool water and keep it balanced, but rather to produce chlorine from a mild salt solution within the water. We encourage regular water testing, balancing and correction if & when required to maintain the recommended balanced levels of your pool water. This is a vital part of a complete maintenance program and will ensure trouble free performance as well as a healthy and sparkling clean pool.

There is one design, comprising 6 different size models in our range:

The models available (CX15, 25, 25LS, 35, 45 and 55) are all reverse polarity units designed to automatically change direction every 4-16hrs (depending on your setting). See 7.3 CELL CLEANING to change the reversing times. This change of polarity causes the calcium to dislodge and keep the cell plates clean. Please note occasional cleaning of the electrode plates may still be necessary.

Thank you again for choosing an Oasis CX Premium Salt & Mineral Chlorinator We wish you many happy years of swimming in your crystal clear pool.






2.1 Recommendations and Helpful Hints

- Read and keep your manual in a safe place.
- Increase chlorine production when temperature goes up.
- Use stabiliser to stabilise chlorine in pool.
- Maintain your salt levels between 3000-3500ppm for optimum performance.
- 1500-2000ppm for CX25LS Low Salt Model.
- Decrease production when temperature goes down see 6.4 WINTER / BLANKET MODE.

2.2 Contents Wall mounting bracket Power pack Cell housing with unions with level ##T] 88 2x 50/40 2x green wall The installation Reducing bushes Plugs with screws & operating manual 2.3 Tools Needed Drill with 6mm **Basic PVC fittings** PVC primer & glue





Hacksaw

No.2 philips head screwdriver

BEFORE OPERATING YOUR OASIS CX PREMIUM SALT & MINERAL CHLORINATOR PLEASE READ THE FOLLOWING:

Check your salt levels in your pool before starting your unit. See 6.6 to perform a SALT TEST.

Salt and mineral levels should ideally be 3000-3500ppm (1500ppm -2000ppm for CX25LS) and no more than 5000ppm. To achieve this with minerals you will need to add approximately 20-30% more product to the pool water. Contact your local pool Professional for further assistance.



Salt levels above 6000ppm may overload the unit and cause excessive heat and void your warranty.

For all new pool installations please seek advice from your pool builder or your local pool Professional before adding salt, as some new surfaces request no salt to be added when initially completed.

NEVER ADD SALT/MINERALS DIRECTLY TO THE SKIMMER BOX. This high concentration of either salt or minerals will pass through your filtration, pump and other pool.

HANDY TIPS

The colder the water the lower your output but this does not mean you need more salt. There will always be less chlorine demand in colder water.

We recommend 3.5kg per 1000 litre of pool water and a 50,000lt new pool needs approximately 175kg of salt. For the FRESHWATER LOW SALT SYSTEM Model: CX25LS, we recommend 1.5kg per 1000 litre of pool water.

The unit can operate on mineral/magnesium chloride salts, and you should allow an extra 20-30% extra product for these types of salts.

Salt should always be added to the shallow end of the pool and allowed to dissolve. **DO NOT** let the salt settle on the floor of the pool as they may cause damage to the surface. Use your pool brush to mix the salt into the water.

Running the pump will mix the water and help the salt to dissolve.

Only run the pump in the first 8 - 12 hours (ensure the cell is switched off to allow the salt to dissolve.)

By pressing (TDS TEST) a salt measurement is taken, and a total TDS reading is indicated. The ideal TDS reading should be an LCD display of "OK", approximately 3000-3500ppm. If "HIGH" is displayed, the salt level is above 4500ppm and the salt level is too high, and if "LOW" is displayed the salt is below 1000ppm and we suggest taking a sample to your local pool Professional for a more accurate result and further assistance. For the freshwater low salt system Model: CX25LS, the ideal or "OK" TDS reading is 1500-2000ppm.

4. POWER PACK AND CELL INSTALLATION

4.1 Power Pack Installation



The Oasis CX Premium Salt & Mineral Chlorinator has an Ingress Protection Rating of IP23 enabling it to be installed outdoors. Regulations require that the Power Pack shall be installed outside the pool zone. The Power Pack shall be installed according to AS/NZS 3000 wiring rules.

The Power Pack should be installed in a well-ventilated position ideally away from sunlight and rain to prolong life and at least 1m above ground to prevent run of water entry.

Ensure that the Power Pack is not stored near chemicals, fertilisers or in a closed unventilated shed with similar products as the fumes will cause excessive corrosion and damage to the internals of the Power Pack and may void warranty.

When mounting the Power Pack on a post it is recommended to install a flat panel at least the same size to act as a waterproof backing plate.



Mount the Power Pack with the Mounting Bracket, Green Plugs and Screws provided.

The Power Pack should be mounted no further than 1.5 metres from the Chlorinator Cell for ease of operation.

4.2 Cell Electrode Installation

Connect the Cell Housing horizontally in the return line to the pool (use reducing bushes supplied if 40mm PVC pipe) using high pressure PVC glue. The Cell Housing can be mounted vertically but provision must be made for a gas trap.



Direction of water flow through the Cell Housing is not critical although we do recommend entry from the closed end of the Cell Housing and exit from the end closest to the Cell Locking Ring. The reason is to cause less water hammer over time on the cell plates.

Check that the O-ring is clean, greased with silicone grease (**DO NOT** use petroleum-based jelly) and securely located in the Cell Housing.

Ensure Cell Locking Ring is firmly tightened by hand (**DO NOT** use a tool to tighten).

Connect the lead from the Cell Electrode to the Cell Plug under the Power Pack ensuring a firm snap lock connection.

Plug the Power Pack 3 pin plug into a suitable weatherproof RCD protected 10amp outlet and then plug the pump into the 3 pin AC Socket located at the bottom of the Power Pack.

WARNING: DO NOT plug in if carton has been wet



Important Notes:

The pump rating must not exceed 8amps.



Saltwater may damage electrical components in the Power Pack.

WARNING:

We **DO NOT** recommend the use of valves on the inlet or outlet of the cell housing. If you do use a valve, then it is important to ensure that the valve cannot deadhead (lock closed) while the pump is running. It is the installers responsibility to ensure some form of flow control is installed in this instance, and it disables the pump.

ALWAYS ensure that pipe work and equipment **DO NOT** allow gases generated from the cell to collect and build up in any part of the installation.

It is **RECOMMENDED** that the Cell Housing be installed horizontally to create a natural gas trap that acts as a safety device. Installation in any other way may cause explosion, injury or death if the installer does not allow for gas removal. A venturi pipe is installed/moulded within the Cell Housing design to eliminate any possible gas build up, although it is always recommended to ensure proper installation to eliminate this from happening.

The Cell Housing must be installed in the **RETURN** pipework to the pool. It must always be installed after the filter, gas heater, solar heating, or heat pump.

DO NOT apply priming fluid to the cell Housing, it is not needed and may react with the plastic.

CX Chlorinator - Salt and Mineral Operation MANUAL

5. INITIAL START UP OF YOUR UNIT

5.1 Initial Start Up

On initial start-up of your Oasis CX Premium Salt & Mineral Chlorinator the screen to the right will be displayed.

5.2 Start Up Clock Set

START UP CLOCK SET allows you to program the exact time of the day.

HH digits will flash and pressing [+] will increase the time and pressing [-] will decrease the time.

Pressing [OK] saves the selected hour HH and MM.

Pressing [<] skips this menu however you will need to set this later.

MM digits will flash and pressing [+] will increase the time and pressing [-] will decrease the time.

Pressing [OK] saves the selected hour HH and MM.

Pressing [<] returns you to the previous menu screen.

5.3 Start Up Run Period

START UP RUN PERIOD allows you to program your daily run times.

CYCLES/DAY will flash and pressing [+] or [-] will change the selection.

PERIODS of running.

2 CYCLES/DAY - unit runs from 6am-10am and 4pm-8pm

1 CYCLE AM - unit runs from 8am - 4pm

1 CYCLE PM - unit runs from 8pm-4am

Pressing [OK] saves the selected PERIOD

Pressing [<] returns you to the previous menu screen.

5.4 Start Up Information

START UP INFORMATION allows you to customise the unit to your pool size.

Pressing [+] or [-] will change it in 1,000lt increments.

Holding the [+] or [-] in will change it in 5,000lt increments.

A reading of 40,000lt or similar flashes to show it can be changed.

Pressing [OK] confirms your selection. If you **DO NOT** know your pool size you can press [OK] and set this later or contact your local pool Professional for further assistance. Pressing [<] returns you to the previous menu screen.

START UP CLOCK SET ACTUAL TIME: HH:MM [+] or [-] to change [OK] SAVE

EMBEDDED

< VER: SCXX.XX : CHECKING SYSTEM

MODEL: 259/hr

SOFTWARE





START UP INFORMATION POOL SIZE: 40,000Lt [+] or [-] to change [OK] SAVE [<] RETURN MINERAL OR SALT MIX allows you to enter the type of mineral used in the pool.

Pressing [+] or [-] will change it from SALT to MINERAL MIX.

The reason for this is because more minerals are required to be as conductive as SALT.

Pressing [OK Pressing [OK] confirms your selection.

Pressing [<] returns you to the previous menu screen.

5.6 Default Display Screen

DEFAULT DISPLAY SCREEN (DDS) displays the screen to the right. This is the actual output % of the unit.

Pressing [+] or [-] will increase the setting and the screen will change as seen on the right.

This should always remain at 100% unless SPA MODE has been selected.

The (•) symbol indicates normal operation.

T2 is the default timer displaying "Dual Timer Cycle" and T1 displays "Single Timer Cycle" when single timer is selected.

The Mode shows AUTO and this can be changed by pressing Power/Mode (either AUTO,ON or OFF)

The time shows with HH:MM in 24hr clock format.

The cell status shows as FWD when the cell is in the forward direction and REV when in the reverse direction.

The pump AC socket status is displayed, either ON or OFF.

The Water Temperature is displayed.

Any power failures return you to the DDS screen and the last saved MODE is active.





CONTROL PANEL OPERATION 6.

6.1 OK BUTTON

Menus are entered by either pressing the menus shortcut button on the control panel or by entering MAIN MENU, which is done by pressing the [OK] button.

Any inactivity in any display for longer than 60 seconds results in the display returning to the DDS screen.

MAIN MENU allows you to enter all MENU's including those available with shortcut buttons on the control panel.

Pressing [+] takes you to the last menu and using the [-] or [OK] enters the first 3 menus.

Pressing [<] returns you to the previous menu screen.

Pressing [+] or [-] scrolls up or down and [OK] enters the flashing menu

Below are the available menus in the Oasis CX Premium Salt & Mineral Chlorinator See 7.0 for the workings of any menu's not explained here.

10

11

12

13


Salt Test


Spa Mode

Service Menu

Winter / Blanket Mode

- 1 Backwash
 - Power/Mode 8 Pump Setting Brightness 9
- 2 3 Cell Cleaning
- 4 Chlor Boost
- 5
- Chlor Setting
- 6 Clock/Timer
- 7 Contrast

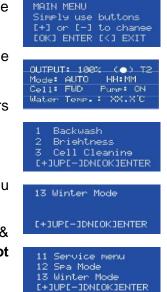

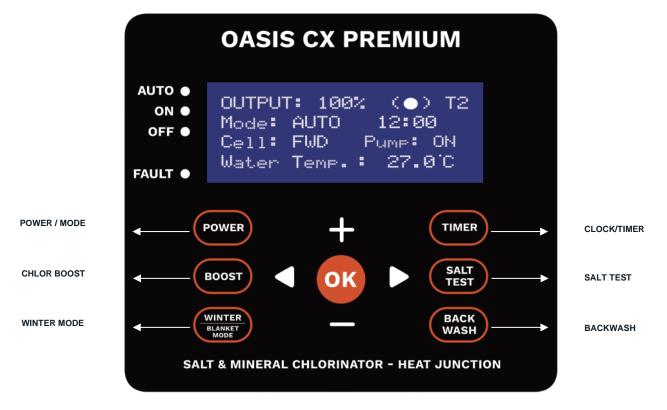

6.2 POWER/MODE

[POWER] button changes the operating modes of your Oasis CX Premium Salt & Mineral Chlorinator.

When pressed the Mode will change AUTO to OFF then ON.

When the unit is first powered on the factory setting is in AUTO as shown to the right

Pressing [POWER] to OFF will display the screen as seen to the right

Pressing [POWER] to ON will display the screen as seen to the right

Pressing [OK] from the DDS screen enters the MAIN MENU.

Pressing [+] takes you to the last menu and using the [-] or [OK] enters the first 3 menus.

Pressing [<] returns you to the DDS screen.

Pressing [+] takes you to last menus.

Pressing [+] 5 times above displays the display shown to the right.

Press [OK] to enter POWER/MODE.

Pressing [OK] enters the display shown to the right and pressing the [+] or [-] allows you to adjust the POWER/MODE setting from AUTO to OFF to ON. Pressing [OK] saves the required mode and returns to the previous screen. Pressing [<] returns you to the DDS screen

6.3 CHLOR BOOST

BEFORE ENTERING CHLOR BOOST YOU MUST BE IN THE DDS SCREEN.

[BOOST] button sets your Oasis CX Premium Salt & Mineral Chlorinator pump to operate for 8hrs and automatically sets the chlorine setting to 100%. This allows for an injection of extra sanitising time, also know as Chlorine Boost or Super-Chlorinate. The bottom line will alternate between "[CHLOR BOOST] to END" and the fault message if there is any fault during CHLOR BOOST.

When in operation the LED will be on. After the set time it reverts back to last selected POWER/MODE unless ON then it reverts to AUTO.

The unit automatically defaults to 08:00 hours of ON time and the timer starts counting down immediately.

The first two digits 08 will flash while adjusting them as shown to the right.

Pressing [+] or [-] increases or decreases in increments of 01:00 hrs whilst running.

When completed the unit will return to the DDS screen in the last selected POWER/MODE state and the CHLOR BOOST LED goes OFF.

Pressing [BOOST] again allows you to exit the CHLOR BOOST screen and return to the DDS screen.

CHLOR BOOST can also be entered by pressing the [OK] button in MAIN MENU and scrolling to CHLOR BOOST.



OUTPUT: 0% (●) T2 Mode: OFF HH:MM CeLL: OFF Pump: OFF UNIT TURNED OFF

OUTPUT: 100% (●) T2 Mode: ON HH:MM CeLL: FWD Pump: ON Water Temp.:XX.X°C

MAIN MENU Simply use buttons [+] or [-] to change [OK] ENTER [<] EXIT



POWER / MODE Setting: AUTO [+] or [-] to change [OK] SAVE [<] BACK

> CHLOR BOOST TIME Settine: 08:00:00hrs [+] or [-] to chanee [CHLOR BOOST] to END

CX Chlorinator - Salt and Mineral Operation MANUAL

6.4 WINTER / BLANKET MODE

ACTIVATE THOUGH WINTER MONTHS OR WHEN BLANKET IS IN USE

BEFORE ENTERING WINTER / BLANKET MODE YOU MUST BE IN THE DDS SCREEN.

[WINTER / BLANKET MODE] button automatically turns your Oasis CX Premium Salt & Mineral Chlorinator set point (Chlor Setting) down by 50% when the unit is either in AUTO or ON mode. The unit defaults to a 50% set point and will stay on this until [WINTER / BLANKET MODE] is pressed again.

When in operation the LED will be on.

Pressing [+] or [-] increases or decreases this 50% set point by increments of 10% from 0% to 90%.

Once your desired set point is entered, pressing [OK] will return to the DDS screen and the output will display at the lowered set point (50% different if you set it to that).

Pressing [WINTER / BLANKET MODE] whilst ON automatically turns this LED off and the unit returns to a set point of 100%.

Pressing [TIMER] will allow you to adjust operating times of the unit if necessary. See 6.5 CLOCK/TIMER for more detail or contact your local pool Professional for further assistance.

[WINTER / BLANKET MODE] can also be entered by pressing the [OK] button in MAIN MENU and scrolling to WINTER / BLANKET MODE.

6.5 CLOCK/TIMER

BEFORE ENTERING CLOCK/TIMER MODE YOU MUST BE IN THE DDS SCREEN.

Your Oasis CX Premium Salt & Mineral Chlorinator unit comes with a built in digital time CLOCK /TIMER displays are all shown in 24 hour format.

[TIMER] button allows you to set the CLOCK and run TIMER times of the chlorinator .

It is important to understand the difference between CLOCK and TIMER CLOCK means the physical time of the day (e.g. 08:00) and TIMER means the settings programmed to turn the unit ON and OFF

To run the chlorinator in MANUAL ON (i.e. always ON): Mode set to: ON T1 & T2 ON & OFF set to 00:00

6.51 Clock Settings

CLOCK SETTING allows you to program the exact time of the day.

HH digits flash and pressing [+] increases the time and [-] decreases the time. Pressing [OK] accepts the selected hour HH.

Pressing [<] exits you to the DDS screen.

MM digits flash and pressing [+] increases the time and [-] decreases the time.

Pressing [OK] accepts the selected minute MM.

Pressing [<] returns you to the previous display.

Obviously, sunlight and higher bather loads in summer dissipate more chlorine than in winter. That is why you need to check your chlorine reading regularly and adjust your settings when required .

WINTER MODE OUTPUT Setting: 50% [+] or [-] to change [OK] SAVE [K] EXIT



TIME:

 [-1] SAVE CK1 HH: MM

to chanee [<] RETURN



Summer Settings



Ideally, run for 4 hours in the morning (6am-10am) and 4 hours in the evening (4pm-8pm). For a smaller pool you can run less hours. In extreme weather it may be necessary to run longer hours. Contact your local pool Professional for further assistance.

Winter Settings See 6.4 WINTER / BLANKET MODE for more detail

6.52 Timer Settings

Pressing [TIMER] displays the screen to the right.

Pressing [+] then it changes to Single Timer Cycle (T1).

Pressing [OK] accepts the selected cycle and enters the Timer Program.

To program the actual time of the day press [TIMER] again.

Pressing [+] changes back to Dual Timer Cycle (T2).

Pressing [OK] accepts the selected cycle and enters the Timer Program.

To program the actual time of the day press [TIMER] again.

TIMER 1: ON TIME (HH)

HH digits flash and pressing [+] increases the time and [-] decreases the time. Pressing [OK] accepts the selected hour HH.

Pressing [<] returns you to the previous display.

TIMER 1: ON TIME (MM)

MM digits flash and pressing [+] increases the time and [-] decreases the time.

Pressing [OK] accepts the selected minute MM. Pressing [<] returns you to the previous display.

TIMER 1: OFF TIME (HH)

HH digits flash and pressing [+] increases the time and [-] decreases the time. Pressing [OK] accepts the selected hour HH.

Pressing [<] returns you to the previous display.

TIMER 1: OFF TIME (MM)

MM digits flash and pressing [+] increases the time and [-] decreases the time.

Pressing [OK] accepts the selected minute MM. Pressing [<] returns you to the previous display.

TIMER 2: ON TIME (HH)

HH digits flash and pressing [+] increases the time and [-] decreases the time. Pressing [OK] accepts the selected hour HH.

Pressing [<] returns you to the previous display











TIMER 1: OFF TIME STOP TIME: HH:MM [+] or [-] to chanse [OK] SAVE [<] RETURN









pool Professional for more accurate results and advice. For the freshwater low salt system Model: CX25LS, the ideal or "OK" TDS reading is 1500-2000ppm.

Similarly, if the display indicates "LOW" take a sample of pool water to your

Low salt levels (below 1000ppm) and high salt levels (above 8000ppm) are difficult to measure and results may become inaccurate. It may be that your cell needs replacing, contact your local pool Professional for a more accurate result and further assistance.

The SALT TEST measurement is meant to be a guide only as many factors can impact the result. We recommend you take your pool water sample to your local pool Professional before adding salt/minerals or replacing your Cell.

NEVER add more salt if not required. NEVER add salt directly in the skimmer box.

SALT TEST can also be entered by pressing the [OK] button in MAIN MENU and scrolling to SALT TEST.

BEFORE ENTERING SALT TEST YOU MUST BE IN THE DDS SCREEN.

[TDS TEST] button measures the salt level in your swimming pool. A reading will appear on the screen, allow at least 30 seconds for an accurate reading.

BEFORE PERFORMING A SALT TEST, ENSURE THE CELL IS CLEAR OF ANY CALCIUM DEPOSITS, AS THIS WILL INSULATE THE ELECTRODES AND IMPACT YOUR READINGS.


See 9.1 Inspecting and Cleaning the Cell Electrode if manual cleaning is required.

The Salt level is tested and displayed as shown to the right.

By pressing (TDS TEST) a salt measurement is taken, and a total TDS reading is indicated. The ideal TDS reading should be "OK", approximately 3000-3500ppm.

If "HIGH" is displayed, the salt level is above 4500ppm and the salt level is too high, and we suggest taking a sample to your local pool Professional for a more accurate result and further assistance.





BEFORE ENTERING BACKWASH MODE YOU MUST BE IN THE DDS SCREEN.

[BACKWASH] button assists you in the operation of your pump and filter during the backwash process.

IMPORTANT INFORMATION BEFORE PERFORMING A BACKWASH.



NEVER OPERATE THE FILTER LEVER WHILE THE PUMP IS RUNNING YOU MAY DAMAGE THE SEAL AND LEAKS MAY OCCUR.

THE PUMP WILL START AND STOP AS YOU REQUIRE.

ENSURE ALL THE VALVES, VALVE HANDLE, LIDS, BASKETS, ETC. ARE IN THE IN THE CORRECT POSITIONS AS PER THE REQUIREMENTS OF THE MANUFACTURERS OF THAT EQUIPMENT.

[FILTER CLEAN] can also be entered by pressing the [OK] button in the MAIN MENU and scrolling to BACKWASH MODE.

ALWAYS FOLLOW MANUFACTURERS INSTRUCTIONS.

IF UNSURE PERFORM MANUALLY BY PRESSING [POWER] ON&OFF TO DO THE FILTER CLEAN.

During BACKWASH the [POWER] button displays the ON LED when the pump is running and the OFF LED displays when the pump is stopped.

Pressing [OK] starts the pump for 2 minutes and TIME LEFT will be displayed automatically counting down in 1 sec increments.

Once dirty water in the waste pipe or sight glass is clear press [OK] to finish.

RINSE MODE will then be displayed.

Pressing [OK] stops the pump and RINSE MODE is displayed.

Rotate the filter multi-port valve to the backwash position, ensure the handle locks in place and once ready press [OK] to enter the RINSE MODE cycle.

Pressing [<] or [FILTER CLEAN] allows you to exit and this takes you to BACKWASH COMPLETE.

Pressing the [OK] button starts the pump for 2 minutes.

TIME LEFT automatically starts counting down in 1 sec increments.

Once dirty water in the waste pipe or sight glass is clear then press [OK] to finish RINSE MODE and enter BACKWASH COMPLETE MODE.

Pressing [OK] stops the pump and BACKWASH COMPLETED is displayed Rotate the filter multi-port valve to the filter position, ensure the handle locks in place and once ready press [OK] to enter the final BACKWASH COMPLETED cycle.



LEFT: 02:00 min

NEXT [<] EXIT

BACKWASH MODE Set MPValve to Back

EOK3









7. UNIT MENU GUIDE

7.1 Backwash

See 6.7 BACKWASH (CONTROL PANEL OPERATION)

7.2 Brightness

BRIGHTNESS is entered by pressing the [OK] button in the MAIN MENU and scrolling to BRIGHTNESS (Menu 2).

The factory setting is 60%.

Pressing [+] or [-] allows you to adjust the BRIGHTNESS. Pressing [OK] saves

the selection.

7.3 Cell Cleaning

Smart self-cleaning technology allows the polarity of the OXI Cell plates to change direction every 4-16hrs (depending on your setting). The change of polarity causes the calcium to dislodge and keep the OXI plates clean. Please note occasional cleaning of the plates may be necessary.

The factory setting is every 10 hours and this can be adjusted from as low as 4 hours (for high calcium areas) and as high as 16 hours.

In areas where the calcium hardness of the water is low (less than 200ppm) cleaning of the cell may not be necessary. Where calcium levels exceed 200ppm, regular inspection of the cell is necessary. Cleaning in an acid solution may be necessary.

CELL CLEANING is entered by pressing the [OK] button in the MAIN MENU and scrolling to

CELL CLEANING.

7.4 Chlor Boost

See 6.3 CHLOR BOOST (CONTROL PANEL OPERATION)

7.5 Chlor Setting

CHLOR SETTING automatically controls the Chlorine output for your Oasis CX Premium Salt & Mineral Chlorinator.

This feature is particularly handy when you want to run the pump for longer hours (i.e. maybe with a variable speed pump or you want additional filtration. If this is the case the levels would be decreased.


The factory setting is set to 100%.

Pressing [+] or [-] anytime whilst in the DDS screen increases or decreases in 1% increments.

CHLOR SETTING is entered by pressing the [OK] button in the MAIN MENU and scrolling to CHLOR SETTING (Menu 5).

7.6 Clock/Timer

See 6.5 CLOCK/TIMER (CONTROL PANEL OPERATION)





CONTRAST is entered by pressing the [OK] button in the MAIN MENU and scrolling to CONTRAST (Menu 7).

The factory setting is 50%.

Pressing [+] or [-] allows you to adjust the CONTRAST adjustment and pressing [OK] saves the required CONTRAST and returns to the DDS screen.

7.8 Power/Mode

See 6.2 POWER/MODE (CONTROL PANEL OPERATION)

7.9 Pump Setting

PUMP SETTING is designed to protect your pump if there is no flow of water. This means the time the pump is allowed to run after the water sensor on the Cell detects there is no flow of water. The pump will be turned off from 3 to 10 minutes, after detecting no water flow.

PUMP SETTING is entered by pressing the [OK] button in the MAIN MENU and scrolling to PUMP SETTING (Menu 9).

The default setting is 3 minutes and pressing [+] or [-] allows you to adjust the time the pump is turned off for. Pressing [OK] saves the required protection time.

You can also select OFF and it will be disabled and will not stop the pump outlet.

7.10 Salt Test

See 6.6 SALT TEST (CONTROL PANEL OPERATION)

7.11 Service Menu

Please contact your distributor or your local pool Professional for further information.

7.12 Spa Mode

SPA MODE allows your unit to be adjusted to suit your spa.

SPA MODE is entered by pressing the [OK] button in the MAIN MENU and scrolling to SPA MODE (Menu 12).

Pressing [+] or [-] allows you to adjust the SPA MODE settings from OFF to ON and ON to OFF.

Selecting OFF setting leaves the OUTPUT SETTING at 100% and ON changes the OUTPUT SETTING to 10%.

When SPA MODE is selected on the DDS screen will change as shown to the right.

Pressing [OK] saves the required settings and returns to the DDS screen.


7.13 Winter / Blanket Mode

See 6.4 WINTER / BLANKET MODE (CONTROL PANEL OPERATION)









SAVE [<] BACK

8. WATER CHEMISTRY

The Oasis CX Premium Salt & Mineral Chlorinator unit is designed for use with swimming pool water balanced in accordance with the Langelier Saturation Index with a pH range of 6.8-7.8.



As previously advised, for best performance and operation of your Oasis CX Premium Salt & Mineral Chlorinator unit, certain water balances must be maintained within your swimming pool. Have your water tested regularly. Transport the test water in an opaque container and have the test done as soon as possible as possible for best results.

8.1 Chlorine

Measurement Interval: Once a week

Ideal Chlorine (Free Chlorine) Levels: 2-3ppm (2-3mg/L) and no more than 4ppm (4mg/L).Adjust the chlorine output by pressing [+] in DDS to increase the required output set point in 1% increments up to 100%. Pressing [-] will decrease the output in 1% increments to 0%. Running the unit for longer or shorter hours can achieve the same result.

8.2 Salt

Measurement Interval: Every 4-6 weeks

Ideal Salt Levels: 3000-3500ppm and no more than 4000ppm.

For the FRESHWATER LOW SALT SYSTEM Model: VP25LS, the ideal TDS reading is 1500-2000ppm.

Although salt is not consumed by the Chlorinator, salt is lost during backwashing, pool overflow, splashing and on bathers that use it. The correct salt level allows for the most efficient production levels and electricity consumption.

The salt level **SHOULD NOT** go below 3000ppm or 1500ppm for the CX25LS model. Operating the unit with too little salt in the pool will cause damage to your Cell.

Salt is the essential element by which your unit operates. Not enough salt means not enough chlorine - this simple rule governs the total operation of your Oasis CX Premium Salt & Mineral Chlorinator unit, and insufficient salt will damage, your Cell. Use ultrafine Salt or premium Salt to keep optimum salt levels. The unit will operate with good stability on higher salt levels but it is still advisable to run at the correct level to prevent damage. Salt levels above 4000ppm or 2500ppm in the CX25LS model may overload the unit and cause excessive heat.



NEVER ADD SALT DIRECTLY TO THE SKIMMER BOX.

This high concentration of salt will pass through your filtration, pump and other pool equipment.

HANDY TIP: The colder the water the lower your output but this does not mean you need more salt. There will always be less chlorine demand in colder water.

We recommend 3.5kg per 1000 litres of pool water and a 50,000lt new pool needs approximately 175kg of salt. For the FRESHWATER LOW SALT SYSTEM Model: CX25LS, we recommend 1.5kg per 1000 litre of pool water.

The unit can operate on mineral/magnesium chloride salts and you should allow an extra 20-30% more product for these type of salts. Salt should always be added to the shallow end of the pool and allowed to dissolve. **DO NOT** let the salt settle on the floor of the pool as this may cause damage to the surface. Use your pool brush to mix the salt into the water.

Running the pump will mix the water and help the salt to dissolve.



Low salt levels (<1000ppm) will destroy the coating on the Cell and void the warranty.

Measurement Interval: Once a week Ideal pH Levels: Concrete Pools: 7.4 - 7.6

Fibreglass/Vinyl Pools: 7.0 - 7.2

A pH of 8.0 makes oxidization only about 26% effective which is why it is critical to keep your pH in range.

A correct pH level must be maintained to prevent problems such as black spot, staining, cloudy water, etc.

An incorrect pH level can damage the surface finish and wall of your pool.

When pH is high you can add Hydrochloric Acid to lower the pH.

When pH is low you can add pH Increaser - sodium bicarbonate (soda ash) to increase the pH.

8.4 Total Alkalinity

Measurement Interval: Every 4-6 weeks Ideal Total Alkalinity Levels: Concrete Pools: 80 - 150ppm

Fibreglass/Vinyl Pools: 80 - 120ppm

Total Alkalinity should not be confused with pH, although the two are closely related. Total Alkalinity determines the speed and ease of pH change, it is measured in ppm. You should use a test kit which includes a test for Total Alkalinity. Low Total Alkalinity can cause unstable pH levels. This causes an inability to keep the pH constant and may cause staining, etching and corrosion of metals. High Total Alkalinity will cause constantly high pH levels.

When Total Alkalinity is high you can add Hydrochloric (a little at a time) to lower the Total Alkalinity.

When Total Alkalinity is low you can add pH buffer - sodium bicarbonate to raise the Total Alkalinity.

8.5 Calcium Hardness

Measurement Interval: Every 3 months Ideal Calcium Hardness Levels Concrete Pools: 250 - 300ppm

Fibreglass/Vinyl Pools: 150 - 190ppm

In addition to pH and Total Alkalinity, Calcium Hardness must be kept in balance so that your pool water does not become too corrosive or end up scaling the surface of your pool. These are symptoms of swimming pool water that is unbalanced.

8.6 Stabiliser

Measurement Interval: Every 4-6 weeks

Ideal Stabiliser Levels: 30 - 70ppm

The importance of pool Stabiliser cannot be over emphasised. It is essential in helping retain chlorine in your pool. Chlorine is rapidly dissipated by sunlight and the use of Stabiliser will reduce this dissipation dramatically. Without Stabiliser, it may be necessary to run the unit for longer hours.



THE MOST IMPORTANT NOTICE AND WARNING:

Only add chemical in the method and quantities as indicated on the packaging provided or advised by your local pool Professional. Also, if in doubt of any results you achieve then do not hesitate to consult with your local pool Professional.

9. CHLORINATOR MAINTENANCE

Maintenance of your VAPURE VP-Series Salt Chlorinator is simple. Your unit has to be one of the most productive pieces of equipment on your swimming pool so it requires some basic maintenance.

While water chemistry will always be the most important form of maintenance there are also other hints and pointers to take note of.

DO NOT cover the Power Pack with towels or similar. There are vents that could be closed and these need air to keep the unit cool.

To extend the life of your unit we always recommend installation in an undercover area away from the elements.

Placing the unit in a closed shed or similar environment with chemicals, fertilisers and other corrosives will damage the unit and could void your warranty. Keep the chlorinator off at all times during backwash cleaning of your filter. Please remember to turn it on once done and return the unit to AUTO mode. **See 6.7 BACKWASH** for further details.

Check that the plug connections on the Cell and the base of the unit are tight and are in sound condition at least once a year.

9.1 Inspecting and Cleaning the Cell Electrode

Reverse Polarity cells should not normally require cleaning, however, in areas with very hard water all calcium may not be removed. A calcium deposit might form on the lower areas of the cell, the sensor or the sides of the cell plates. This will NOT affect the operation of your chlorinator, however you can use Cell Cleaner to clean the Cell.

All salt chlorinator cells must be cleaned before scale/calcium builds up to the point where the electrode gaps in the Cell are bridged. If the Cell has excessive calcium deposit, this may damage the electrode coating, as the bridging causes rubbing on the plate coating and this will affect the operation.

Check the Cell to prevent the accumulation of pool debris that for any reason may have by-passed the pool filter, particularly after backwashing.

Check that the O-ring is clean, greased with silicone grease (**DO NOT** use petroleum-based jelly) and securely located in the Cell Housing.

FOR CLEANING, PLEASE FOLLOW THESE STEPS:

Press [POWER] to OFF as this ensures the pump and the unit will not turn on.

Unscrew the Cell Locking Ring and remove the electrode for inspection. If calcium build-up is present, immerse the electrode in Cell Cleaner.

A solution can be made by mixing 1 part hydrochloric acid to 10 parts of water. If excessive build up is present a stronger solution may be used to remove the calcium. Using 5 parts of water will make a more aggressive solution but will not damage the Cell. You can use Cell Cleaner, and if you do, then follow the instruction supplied.

Allow the cleaning solution to dissolve the calcium deposits for about 10 minutes. Dispose of the cleaning solution at an approved Council Depot and never into storm water or sewage drains.

HANDY TIP:

Returning this mix to your pool only returns the calcium you just removed, so you may be better off reusing the solution until exhausted then disposing of it. Always store this solution in a safe method as advised on the container.

DO NOT scratch or bend the electrode plates in the Cell Housing.

Ensure that the O-ring is clean, greased and properly seated.

Rinse the electrode in clean water and refit the electrode in the Cell Housing, ensuring that the Cell Locking Ring is hand tight and secure.

When mixing acid with water, ALWAYS ADD ACID TO WATER. NEVER ADD WATER TO ACID.

Eye Protection, mask and gloves should be worn when cleaning the cell.

9.2 Inspecting the Power Pack

Little or no maintenance is normally required with the Oasis CX Premium Salt & Mineral Chlorinator Power Pack.

Ensure the Power Pack 3 pin plug plugs into a suitable weatherproof RCD protected 10amp outlet. Ensure that the pump plugs into the 3 pin AC Socket located at the bottom of the Power Pack. Check all plugs and cords for damage. If damaged then it should be replaced by the manufacturer, their agent or similar qualified person in order to avoid a hazard.

If the chlorinator is to be hard wired then a qualified electrician must complete the installation.

The Oasis CX Premium Salt & Mineral Chlorinator Power Pack has air vents to allow internal components to remain cool in hot weather. The VAPURE VP-Series Salt Chlorinator has a special oil spray applied to the inside of the unit during production to stop the insects from entering the unit. To help assist in keeping the insects away, apply a surface spray periodically on the wall or post that the unit is mounted on. **DO NOT** spray directly into the Power Pack and make sure the power is off when you spray. Allow adequate time for the spray to dry before turning power on again.

10. SYSTEM TROUBLESHOOTING



If you suspect for any reason your Oasis CX Premium Salt & Mineral Chlorinator is not performing or running as it should be, here are some handy troubleshooting tips that may assist you.

	Fault Indication	Potential Cause	Remedy	
10.1	FAULT LED «ON» Numerous causes		See the LCD DISPLAY for the reason then go to that section in this troubleshooting guide	
10.2	HIGH SALT WARNING	Salt too high or short on cell plates	Check Salt guide (sec. 6.6/8.2) Check that cell is clear of any foreign materials (e.g. wire, metal, touching plates, etc)	
10.3	INTERNAL TEMPERATURE HIGH	No air flow in the area around the POWER PACK or excessively high salt	Ensure POWER PACK is mounted in a well-ventilated area free of chemicals and fertilisers Check Salt guide (sec. 6.6/8.2)	
		Low salt level	Check salt level (sec. 6.6/8.2)	
	LOW SALT or CLEAN CELL or FAULTY CELL	Build-up of calcium on the Cell plates	Calcium acts as an insulator and needs to be removed. See Cleaning of Cell Electrode (sec. 9.1)	
		Water temperature is low	Winter water temperature can be very low. For every 1°C below 28°C the output can drop 2-3%	
10.4		Insufficient water flow though the Cell	Check water glow and ensure a full chamber of water is passing over the Cell. You may need to backwash your filter (sec. 6.7)	
		The Cell could be damaged or at the end of its life	Damaged coating will reduce cell life and reduce output If all conditions are correct, then the cell could be at the end of its life	
		Level low in one direction but OK in the other	Cell may need cleaning (sec. 9.1) or the Cell may have run its life in one direction	
10.5	NO CURRENT FLOW – NO OUTPUT	Faulty CONTROL or MAIN PCB	Faulty PCB - contact for service	
	WATER FLOW FAULT	No water flow	Possible closed valve, pump fault, burst pipe	
10.6		Low water flow	Water does not cover the water sensor	
		Low speed pump not supplying sufficient water to cell housing	Increase the speed of the pump until hosing is filled	
10.7	WATER TEMP HIGH	No water flow	Possible closed valve, pump fault, burst pipe	
10.8	WATER TEMP LOW Water temperature is below 10°C		The POWER PACK will lower output when water temperature goes below 10°C to protect the cell plates	
10.9	WATER TEMP SUDDEN INCREASE	No water flow	Possible closed valve, pump fault, burst pipe	

Unite Not plugged into power point and conservation of power point not trund on but still no power Check that POWER PACK POWER PACK Press while buttom to reset if tripped 10.10 Not operating at all - no Wall outlet working but still no power Check CIRCUIT BREAKER at bottom of POWER PACK Press while buttom to reset if tripped 10.11 Not operating at all - contact for service CIRCUIT BREAKER stays our in a tripped state Check CIRCUIT BREAKER - contact for service 10.11 Not operating at all - comes on but turns off CIRCUIT BREAKER resets but still no power if needed 2. Short across Cell plates - remove Cell and check the plates for any metal lying across plates 10.12 Everything displays OK Incorrect TIMER settings Press POWERMODE button until in ON mode. Does it work now? 10.14 Everything displays OK Incorrect TIMER settings If metled, then it will need replacing other service? 10.14 OUTPUT reading is less than 100% Every still op of calcium on the Cell plates Cell or service? 10.14 OUTPUT reading is less than 100% Every still evel Check sall tevel (see. 6.6%2.) 10.14 OUTPUT reading is less than 100% Every still evel Check sall tevel (see. 6.6%2.)		Fault Indication	Potential Cause	Remedy
10.10 Not operating at all - no lights Plugged into power used on but still no power Test wall outlet with a working appliance 10.10 Not operating at all - no lights Wall outlet working but still no power Check CIRCUIT BREAKER at bottom of POWER PACK. Press white button to reset if tripped 10.11 Not operating at all - contact for service If you have checked all of the above then there is an internal fault - contact for service 10.11 Not operating at all - comes on but turns off CIRCUIT BREAKER resets but tips again Faulty CIRCUIT BREAKER - contact for service 10.11 Not operating at all - comes on but turns off CIRCUIT BREAKER resets but tips again So that cross Cell plates - remove Cell and check the plates for any metal lying across plates 10.12 Everything displays OK but not turning ON Incorrect TIMER settings Press POWER/MODE button until in ON mode. Dees it work now? 10.13 Sign of metiting or burring Plug Possible moisture entry to the plug Femetod, then it will need replacing otherwise clean with WD40 or similar. Return for service if methed 10.14 OUTPUT reading is less than 100% Ewel will no decliar on the cell could be damaged or at the end of its life Build-up of calcium on the cell. You may need to backwash your filter (sec.7.7) 10.14 OUTPUT reading is less than 100% The Cell could be damaged or at the end of its life Dame				Check that POWER PACK POWER CORD
10.10 Not operating at all - no lights The second operating at all - no power The second operating at all - no power The second operating at all - contact for service Check CIRCUT EREAKER at bottom of POWER PACK. Press white button to reset if tripped 10.11 Not operating at all - comes on but turns off CIRCUIT BREAKER stays out in a tripped state Faulty CIRCUIT BREAKER - contact for service 10.11 Not operating at all - comes on but turns off CIRCUIT BREAKER resets but rips again The secsively high salt - check salt (sec. 6.6/8.2) and lower if in eeded 2. Short arcoss Cell plates - remove Cell and check the plates for any metal lying across plates 10.12 Everything displays OK but not turning ON Incorrect TIMER settings Press POWERMODE button turnli nON mode. Dess it work now? 10.13 Sign of metting or burning of the Cell Connector Plug Possible moisture entry to the plug If metled, then it will need replacing otherwise clean with WD40 or similar. Return for service if metled 10.14 OUTPUT reading is less than 100% Insufficient water flow though the Cell Pouse Calcium acts as an insulator and needs to be removed See Cleaning of Cell Electrode (sec. 7) 10.14 OUTPUT reading is less than 100% Insufficient water flow though the Cell Housing Damaged coating will reduce cell life and reduce output. If all conditions are correct, then cell could be at the end of its life on edirection. 10.15 One direction				goes into wall outlet and outlet is turned on
10.10 Not operating at all - no lights Wall outlet working but still no power POWER PACK. Press white button to reset if tripped 10.10 Not operating at all - comes on but turns off Pressed and reset but still no power POWER PACK. Press white button to reset if tripped 10.11 Not operating at all - comes on but turns off CIRCUIT BREAKER stays out in a tripped state Faulty CIRCUIT BREAKER - contact for service 10.11 Not operating at all - comes on but turns off CIRCUIT BREAKER resets but trips again Faulty continent of the plates for any metal lying across plates 10.12 Everything displays OK but not turning ON pot not comment of the Cell Connector Plug Incorrect TIMER settings Press POWERMODE button until nON mode. Does it work now? 10.13 Sign of melling or burning of the Cell Connector Plug Possible moisture entry to the plug If melted, then it will need replating otherwise clean with WD40 or similar. Return for service if melted 10.14 OUTPUT reading is less than 100%. Insufficient water filow though the Cell Plates If melted, then it will need to be removed 10.14 OUTPUT reading is less than 100%. Insufficient water filow though the Cell Housing If melted, then it will need to be removed 10.14 OUTPUT reading is less than 100%. Insufficient water filow though the Cell Housing Check water flow and ensure a full check les				Test wall outlet with a working appliance
10.10 Not operating at all - no lights power Fourty Prock. Press while building to best if tripped 10.10 Instruction of the above then power Pressed and reset but still no power If you have checked all of the above then there is an internal fault - contact for service 10.11 Not operating at all - comes on but turns off CIRCUIT BREAKER stays out in a tripped state Faulty CIRCUIT BREAKER - contact for service 10.11 Not operating at all - comes on but turns off CIRCUIT BREAKER resets but trips again Sont across Cell plates - remove Cell and check the plates for any metal lying across plates 10.12 Everything displays OK but not turning ON Incorrect TIMER settings Press DWIERMODE button until in ON mode. Does it work now? 10.12 Everything displays OK but not turning ON Incorrect TIMER settings If metled, then it will need replacing otherwise clean with WD40 or similar. Return for service if metled 10.14 OUTPUT reading is less than 100% Build-up of calcium on the Suif-up of calcium on the cell plates Calcium acts as in insulator and needs to be removed (sec. 9.1) 10.14 OUTPUT reading is less than 100% Insufficient water flow though the Cell Housing The Cell could be damaged or at the end of its life 10.15 power Pack only works in one direction. No output in one direction with a UTO Faulty rectiffers, transformer or PVB Cal				Check CIRCUIT BREAKER at bottom of
10.10 lights if tripped 10.10 lights if tripped 10.10 lights if tripped 10.11 Pressed and reset but still no power The value CIRCUIT BREAKER stays out service 10.11 Not operating at all - contact for in a tripped state Service 10.11 Not operating at all - comes on but turns off CIRCUIT BREAKER resets but trips again 1. Excessively high salt - check salt (see, 6.6%2) and lower it if needed 10.11 Everything displays OK but not turing ON Incorrect TIMER settings Press POWER/MODE button until in ON mode. Does it work now? 10.12 Everything displays OK but not turing ON Incorrect TIMER settings Press POWER/MODE button until in ON mode. Does it work now? 10.13 Sign of melting or burning of the Cell Connector Plug Possible moisture entry to the plug The melted, then it will need replacing of the water is an insulator and needs to be removed 10.14 OUTPUT reading is less than 100% Insufficient water flow though the Cell Plates Clack water temperature can be very low For every 1°C below 28°C the output can drop 2-3%. 10.14 OUTPUT reading is less than 100% Insufficient water flow though the Cell Pousing Check water temperature can be very low For every 1°C below 28°C the output can drop 2-3%. 10.14		Not operating at all - no	-	POWER PACK. Press white button to reset
Pressed and reset but still no power there is an internal fault - contact for service 0.11 Not operating at all - comes on but turns off CIRCUIT BREAKER stays out in a tripped state Faulty CIRCUIT BREAKER - contact for service 10.11 Not operating at all - comes on but turns off CIRCUIT BREAKER resets but trips again 1. Excessively high salt - check salt (sec. 6.6%2) and lower it if needed 10.12 Everything displays OK but not turning ON Incorrect TIMER settings Press POWER/MODE button until in ON mode. Does it work now? 10.13 of melting or burning of the Cell Connector Plug Possible moisture entry to the plug Possible moisture entry to the plug Press POWER/MODE button until in ON mode. Does it work now? 10.14 OUTPUT reading is less than 100% Low salt level Check salt level (sec. 6.6/8.2) 10.14 OUTPUT reading is less than 100% Insufficient water flow though the Cell lousing Calcium acts as an insulator and needs to be removed See Cleaning of Cell Electrode (sec. 9.1) 10.14 OUTPUT reading is less than 100% The Cell could be damaged or at the end of its life Damaged coating will reduce cell life and reduce output. If all conditions are correct, the Cell may need cleaning (sec. 9.1) or the Cell may nev	10.10		power	if tripped
power fuller is all internal radit - Contect for service 10.11 Not operating at all - comes on but turns off CIRCUIT BREAKER resets but trips again Faulty CIRCUIT BREAKER - contact for service 10.11 Not operating at all - comes on but turns off CIRCUIT BREAKER resets but trips again Faulty circuitiers, transformer or Cell cable - call for service 10.12 Everything displays OK but not turning ON Incorrect TIMER settings Press POWER/MODE button until in ON mode. Does it work now? 10.13 Sign of melting or burning of the Cell Connector Possible moisture entry to the plug If melted, then it will need replacing otherwise clean with WU40 or similar. Return for service if melted 10.14 OUTPUT reading is less than 100% Everything displays OK build-up of calcium on the Cell plates Calcium acts as an insulator and needs to be removed 10.14 OUTPUT reading is less than 100% Insufficient water flow though the Cell Housing Check water temperature can be very low For every 1°C below 28°C the output can drop 2-3% 10.15 Power Pack only works in one direction The Cell could be damaged or at the end of its life Damaged coating will reduce cell life and reduce output. If all conditions are correct, then Cell could be at the end of its life 10.16 Timer is not functioning properly in AUTO Faulty rectiffiers, transformer or PVB <td></td> <td></td> <td>Proceed and react but still no</td> <td>•</td>			Proceed and react but still no	•
Image: Constant of the cell connector plug CIRCUIT BREAKER stays out in a tripped state Faulty CIRCUIT BREAKER - contact for service 10.11 Not operating at all - comes on but turns off CIRCUIT BREAKER resets but trips again 1. Excessively high salt - check salt (see. 6.6/2.2) and lower it if needed 2. Short across Cell plates - remove Cell and check the plates for any metal lying across plates 3. Faulty rectifiers, transformer or Cell cable - call for service 10.12 Everything displays OK but not turning ON Incorrect TIMER settings Press POWER/IMODE button until in ON mode. Does it work now? 10.13 of the Cell Connector Plug Possible moisture entry to the plug If meted, then it will need replacing otherwise (cean with WD40 or similar. Return for service if meted 10.14 OUTPUT reading is less than 100% Euglid-up of calcium on the Cell plates Calcium acts as an insulator and needs to be removed See Cleaning of Cell Electrode (sec. 9.1) 10.14 OUTPUT reading is less than 100% Insufficient water flow though the Cell Could be damaged or at the end of its life Check water if paradic ensing a curve the Cell may need to backwash your filter (seec6.7) 10.15 Power Pack only works in one direction. No output in one direction but one direction. No output in one direction.				there is an internal fault - contact for
in a tripped state service 10.11 Not operating at all- comes on but turns off CIRCUIT BREAKER resets but trips again 1. Excessively high salt - check salt (sec. 6.6/8.2) and lower it if needed 10.11 Everything displays OK but not turning ON Incorrect TIMER settings across plates 3. Faulty rectifiers, transformer or Cell cable - call for service 10.12 Everything displays OK but not turning ON Incorrect TIMER settings Press POWER/MODE button until in ON mode. Does it work now? 10.13 of the Cell Connector Plug Possible moisture entry to the plug If melted, then it will need replacing otherwise clean with WD40 or similar. Return for service if melted 10.14 OUTPUT reading is less than 100% Isufficient water flow though the Cell Plates Calcium acts as an insulator and needs to be removed See Cleaning of Cell Electrode (sec. 9.1) 10.14 OUTPUT reading is less than 100% Insufficient water flow though the Cell Housing Check water flow and ensure a full che with readed or its life 10.15 Power Pack only works in one direction. No output in one direction. No outpu				
10.11 Not operating at all - comes on but turns off CIRCUIT BREAKER resets but trips again 1. Excessively high salt - check salt (sec. 6.68.2) and lower it if needed 10.11 Everything displays OK but not turning ON Incorrect TIMER settings 2. Short across Cell plates - remove Cell and check the plates for any metal lying across plates 10.12 Everything displays OK but not turning ON Incorrect TIMER settings Press POWER/MODE button until in ON mode. Does it work now? 10.13 Sign of metting or burning of the Cell Connector Possible moisture entry to the plug If melted, then it will need replacing otherwise clean with WD40 or similar. Return for service if melted 10.14 OUTPUT reading is less than 100% Build-up of calcium on the Cell plates Calcium acts as an insulator and needs to be removed See Cleaning of Cell Electrode (sec. 9.1) 10.14 OUTPUT reading is less than 100% Insufficient water flow though the Cell Housing Check water flow and ensure a full chamber of water is passing over the Cell. You may need to backwash your filter (sec6.7) 10.15 Power Pack only works in one direction Faulty rectifiers, transformer or PVB Damaged coating will reduce cell life and reduce output. If all conditions are correct, then Cell could be at the end of its life 10.15 Power Pack only works in one direction Faulty rectifiers, transformer or PVB Returu unit for service 10.16				-
10.11 Not operating at all - comes on but turns off CIRCUIT BREAKER resets but trips again (sec. 6.6/8.2) and lower it if needed 2. Short across Cell plates - remove Cell and check the plates for any metal lying across plates 10.12 Everything displays OK but not turning ON Incorrect TIMER settings Press POWER/MODE button until in ON mode. Does it work now? 10.13 oft metting or burning Plug Possible moisture entry to the Plug If metted, then it will need replacing otherwise clean with WD40 or similar. Return for service if metted 10.14 OUTPUT reading is less than 100% Low salt level Check salt level (sec. 6.6/8.2) 10.14 OUTPUT reading is less than 100% Insufficient water flow though the Cell Polave 28°C the output can drop 2-3% 10.14 OUTPUT reading is less than 100% Insufficient water flow though the Cell Polave 28°C the output can drop 2-3% 10.15 Power Pack only works in one direction but OK in the other The Cell could be damaged or at the end of its life 10.16 Timer is not functioning properly in AUTO Faulty rectifiers, transformer or PVB Damaged coating will reduce cell life and reduce coutput. If all conditions are correct, then Cell may have run its life in one direction 10.16 Timer is not functioning properly in AUTO Incorrect settings Make sure POWER/MODE is set to AUTO. Refer to Timere Setting in this manual sec. 6.52 <t< td=""><td></td><td></td><td>in a tripped state</td><td></td></t<>			in a tripped state	
10.11 Not operating at all - comes on but turns off CIRCUIT BREAKER resets but trips again 2. Short across Cell plates - remove Cell and check the plates for any metal lying across plates 10.12 Everything displays OK but not turning ON Incorrect TIMER settings Press POWER/MODE button until in ON mode. Does it work now? 10.13 Sign of metting or burning of the Cell Connector Plug Possible moisture entry to the plug If metted, then it will need replacing otherwise clean with WD40 or similar. Return for service if metted 10.14 OUTPUT reading is less than 100% Low salt level Check salt level (sec. 6.6/8.2) Calcium acts as an insulator and needs to be removed See Cleaning of Cell Electrode (sec. 9.1) 10.14 OUTPUT reading is less than 100% Insufficient water flow though the Cell Housing Winter water temperature can be very low For every 1°C below 28°C the output can drop 2-3% 10.15 Power Pack only works in one direction. No output in one direction Faulty rectifiers, transformer or PVB Cell may need to backwash your filter (see6.7) 10.15 Power Pack only works in one direction. No output in one direction Faulty rectifiers, transformer or PVB Return unit for service 10.16 Timer is not functioning properly in AUTO Incorrect settings Make sure POWER/MODE is set to AUTO. Refer to Timer Setting in this manual (sec. 6.52) 10.17 Pool pump outlet not functioning				
10.11 Not operating at all - comes on but turns off CIRCUIT BREAKE resets but trips again and check the plates for any metal lying across plates 10.12 Everything displays OK but not turning ON Incorrect TIMER settings Press POWER/MODE button until in ON mode. Does it work now? 10.13 of the Cell Connector Plug Possible moisture entry to the plug If metled, then it will need replacing otherwise clean with WD40 or similar. Return for service if metled 10.14 OUTPUT reading is less than 100% Low salt level Check salt level (sec. 6.6/8.2) 10.14 OUTPUT reading is less than 100% Insufficient water flow though the Cell Housing Check water flow and ensure a full chamber of water is passing over the Cell Housing 10.14 OUTPUT reading is less than 100% Faulty rectifiers, transformer or VE Check water flow and ensure a full chamber of water is passing over the Cell Housing 10.14 OUTPUT reading is less than 100% Faulty rectifiers, transformer or VE Check water flow and ensure a full chamber of water is passing over the Cell Housing 10.15 Power Pack only works in one direction but of end erection. No output in one direction work or VE Damaged coating will reduce cell life and reduce or upt the fle in one direction or or VE 10.16 Timer is not functioning properly in AUTO Faulty rectifiers, transformer or VE Make sure POWER/MODE is set to AUTO. Refe				
10.11 comes on but turns off but trips again and check the paties for any metal lying across plates 10.12 Everything displays OK but not turning ON Incorrect TIMER settings Press POWER/MODE button until in ON mode. Does it work now? 10.13 Sign of melting or burning of the Cell Connector Plug Possible moisture entry to the plug If melted, then it will need replacing otherwise clean with WD40 or similar. Return for service if melted 10.14 OUTPUT reading is less than 100% Low salt level Check salt level (sec. 6.6/8.2) 10.14 OUTPUT reading is less than 100% Insufficient water flow though the Cell Plates See Cleaning of Cell Electrode (sec. 9.1) 10.14 OUTPUT reading is less than 100% Insufficient water flow though the Cell Housing Check water flow and ensure a full chamber of water is passing over the Cell. You may need to backwash your filter (sec6.7) 10.15 Power Pack only works in one direction but OK in the other Faulty rectifiers, transformer or PVB Cell may need cleaning (sec. 9.1) or the Cell may have run its life in one direction 10.16 Timer is not functioning properly in AUTO Faulty rectifiers, transformer or PVB Return unit for service 10.16 Timer is not functioning properly or pump always on this and use on not back water is passing over the cell may have run its life in one direction Cell could be at the end of its life		Not operating at all -	CIRCUIT BREAKER resets	•
10.12 Everything displays OK but not turning ON Incorrect TIMER settings Press POWER/MODE button until in ON mode. Does it work now? 10.13 Sign of melting or burning of the Cell Connector Plug Possible moisture entry to the plug If melted, then it will need replacing otherwise clean with WD40 or similar. Return for service if melted 10.14 OUTPUT reading is less than 100% Low salt level Check salt level (sec. 6.6/8.2) 10.14 OUTPUT reading is less than 100% Insufficient water flow though the Cell Plates Winter water temperature can be very low For every 1°C below 28°C the output can drop 2-3% 10.14 OUTPUT reading is less than 100% Insufficient water flow though the Cell Housing Check water flow and ensure a full chamber of water is passing over the Cell. You may need to backwash your filter (sec6.7) 10.15 Power Pack only works in one direction to one direction to one direction to one direction to one direction Faulty rectifiers, transformer or PVB Return unit for service 10.16 Timer is not functioning properly in AUTO Incorrect settings Make sure POWER/MODE is set to AUTO. Refer to Timer Setting in this manual (sec. 6.2) 10.17 Pool pump outlet not functioning properly or pump always on Pump not plugged into the base of chlorinator Check that pump is plugged into the bottom of the POWER PACK and not directly in to the wall outlet of chlorinator	10.11			
10.12 Everything displays OK but not turning ON Incorrect TIMER settings Press POWERMODE button until in ON mode. Does it work now? 10.13 Sign of meting or burning of the Cell Connector Plug Possible moisture entry to the plug If metled, then it will need replacing otherwise clean with WD40 or similar. Return for service if metled 10.13 OUTPUT reading is less than 100% Low salt level Check salt level (sec. 6.6/8.2) 10.14 OUTPUT reading is less than 100% Water temperature is low Calcium acts as an insulator and needs to be removed 10.14 OUTPUT reading is less than 100% Insufficient water flow though the Cell Housing Check water flow and ensure a full chamber of water is passing over the Cell. You may need to backwash your filter (sec6.7) 10.15 Power Pack only works in one direction. No output in ore direction. No output in one direction ing properly in AUTO Faulty rectifiers, transformer or PVB Return unit for service 10.16 Timer is not functioning properly or pump always on Incorrect settings Make sure POWER/MODE is set to AUTO. Ref				•
10.12 Everything displays OK but not turning ON Incorrect TIMER settings Press POWER/MODE button until in ON mode. Does it work now? 10.13 Sign of melting or burning of the Cell Connector Plug Possible moisture entry to the plug If melted, then it will need replacing otherwise clean with WD40 or similar. Return for service if melted 10.13 OUTPUT reading is less than 100% Low salt level Check salt level (sec. 6.6/8.2) Calcium acts as an insulator and needs to be removed 10.14 OUTPUT reading is less than 100% Insufficient water flow though the Cell Plates Winter water temperature can be very low For every 1°C below 28°C the output can drop 2-3% 10.14 OUTPUT reading is less than 100% Insufficient water flow though the Cell Housing Check water flow and ensure a full chamber of water is passing over the Cell. You may need to backwash your filter (sec6.7) 10.15 Power Pack only works in one direction Faulty rectifiers, transformer or PVB Damaged coating will reduce cell life and reduce output. If all conditions are correct, then Cell may have run its life in one direction 10.16 Timer is not functioning properly in AUTO Incorrect settings Make sure POWER/MODE is set to AUTO. Refer to Timer Setting in this manual (sec. 6.52) 10.17 Pool pump outlet not functioning properly or pump always on Pump not plugged into the base of chlorinator <t< td=""><td></td><td></td><td></td><td>-</td></t<>				-
10.12 but not turning ON Incorrect TIMER settings mode. Does it work now? 10.13 Sign of melting or burning of the Cell Connector Plug Possible moisture entry to the plug If melted, then it will need replacing otherwise clean with WD40 or similar. 10.13 OUTPUT reading is less than 100% Low salt level Check salt level (sec. 6.6/8.2) 10.14 OUTPUT reading is less than 100% Build-up of calcium on the Cell plates Calcium acts as an insulator and needs to be removed 10.14 OUTPUT reading is less than 100% Insufficient water flow though the Cell Housing Winter water temperature can be very low For every 1°C below 28°C the output can drop 2-3% 10.14 OUTPUT reading is less than 100% Insufficient water flow though the Cell Housing Check water flow and ensure a full chamber of water is passing over the Cell. You may need to backwash your filter (sec6.7) 10.15 Power Pack only works in one direction. No output in one direction Faulty rectifiers, transformer or PVB Cell may need cleaning (sec. 9.1) or the Cell may have run its life in one direction 10.15 Power Pack only works in one direction Faulty rectifiers, transformer or PVB Return unit for service 10.16 Timer is not functioning properly in AUTO Incorrect settings Make sure POWER/MODE is set to AUTO. Refer to Timer Setting in this manual (sec. 6.52)				
10.13 Sign of melting or burning of the Cell Connector Plug Possible moisture entry to the plug If melted, then it will need replacing otherwise clean with WD40 or similar. Return for service if melted 10.13 Durput reading is less than 100% Low salt level Check salt level (sec. 6.6/8.2) 10.14 OUTPUT reading is less than 100% Build-up of calcium on the Cell plates Calcium acts as an insulator and needs to be removed see Cleaning of Cell Electrode (sec. 9.1) 10.14 OUTPUT reading is less than 100% Insufficient water flow though the Cell Housing Check water flow and ensure a full chamber of water is passing over the Cell Housing 10.15 Power Pack only works in one direction No output in one direction The Cell could be damaged or at the end of its life Damaged coating will reduce cell life and reduce output. If all conditions are correct, then Cell may need cleaning (sec. 9.1) 10.16 Timer is not functioning properly in AUTO Faulty rectifiers, transformer or PVB Return unit for service 10.17 Pool pump outlet not functioning properly or pump always on continuing properly or pump always on continuing properly or pump always on continuing on continuing properly or pump always on continued on the base of chlorinator Pump not plugged into the base of chlorinator	10.12		Incorrect TIMER settings	
10.13 of the Cell Connector Plug Possible moisture entry to the plug otherwise clean with WD40 or similar. Return for service if melted 10.13 of the Cell Connector Plug Low salt level Check salt level (sec. 6.6/8.2) 10.14 OUTPUT reading is less than 100% Build-up of calcium on the Cell plates Calcium acts as an insulator and needs to be removed 10.14 OUTPUT reading is less than 100% Insufficient water flow though the Cell Housing Water temperature is low Winter water temperature can be very low For every 1°C below 28°C the output can drop 2-3% 10.14 OUTPUT reading is less than 100% Insufficient water flow though the Cell Housing Check water flow and ensure a full chamber of water is passing over the Cell. You may need to backwash your filter (sec6.7) 10.15 Power Pack only works in one direction. No output in one direction Faulty rectifiers, transformer or PVB Return unit for service 10.16 Timer is not functioning properly in AUTO Incorrect settings Make sure POWER/MODE is set to AUTO. Refer to Timer Setting in this manual (sec. 6.52) 10.17 Pool pump ou				
Plug the plug Return for service if melted Plug Low salt level Check salt level (sec. 6.6/8.2) Calcium acts as an insulator and needs to be removed See Cleaning of Cell Electrode (sec. 9.1) 10.14 OUTPUT reading is less than 100% Water temperature is low Winter water temperature can be very low For every 1°C below 28°C the output can drop 2-3% 10.14 OUTPUT reading is less than 100% Insufficient water flow though the Cell Housing Check water flow and ensure a full chamber of water is passing over the Cell. You may need to backwash your filter (sec. 7) The Cell could be damaged or at the end of its life Damaged coating will reduce cell life and reduce output. If all conditions are correct, then Cell could be at the end of its life 10.15 Power Pack only works in one direction. No output in one direction work or PVB Faulty rectifiers, transformer or PVB Return unit for service 10.16 Timer is not functioning properly in AUTO Incorrect settings Make sure POWER/MODE is set to AUTO. Refer to Timer Setting in this manual (sec. 6.52) Check that pump is plugged into the base of chlorinator Pump not plugged into the bottor of the POWER PACK and not directly in to the wall outlet	10 12		Possible moisture entry to	
Image: 10.14 DUTPUT reading is less than 100% Low salt level Check salt level (sec. 6.6/8.2) 10.14 OUTPUT reading is less than 100% Build-up of calcium on the Cell plates Calcium acts as an insulator and needs to be removed See Cleaning of Cell Electrode (sec. 9.1) 10.14 OUTPUT reading is less than 100% Insufficient water flow though the Cell Housing Water temperature is low For every 1°C below 28°C the output can drop 2-3% 10.15 The Cell could be damaged or at the end of its life Check water flow and ensure a full chamber of water is passing over the Cell. You may need to backwash your filter (sec6.7) 10.15 Power Pack only works in one direction but one direction is one direction. No output in one direction is one direction. No output in one direction is one direction. No output in one direction Faulty rectifiers, transformer or PVB Return unit for service 10.16 Timer is not functioning properly in AUTO Incorrect settings Make sure POWER/MODE is set to AUTO. Refer to Timer Setting in this manual (sec. 6.52) 10.17 Pool pump outlet not functioning properly or pump always on chlorinator Pump not plugged into the base of chlorinator Check that pump is plugged into the base of chlorinator	10.15		the plug	
10.14 OUTPUT reading is less than 100% Build-up of calcium on the Cell plates Calcium acts as an insulator and needs to be removed See Cleaning of Cell Electrode (sec. 9.1) 10.14 OUTPUT reading is less than 100% Water temperature is low Winter water temperature can be very low For every 1°C below 28°C the output can drop 2-3% 10.14 OUTPUT reading is less than 100% Insufficient water flow though the Cell Housing Check water flow and ensure a full chamber of water is passing over the Cell. You may need to backwash your filter (sec6.7) The Cell could be damaged or at the end of its life Level low in one direction but OK in the other Damaged coating will reduce cell life and reduce output. If all conditions are correct, then Cell may have run its life in one direction. No output in one direction but OK in the other Cell may have run its life in one direction but OK in the other 10.15 Power Pack only works in one direction in one direction in one direction. No output in one direction Faulty rectifiers, transformer or PVB Return unit for service 10.16 Timer is not functioning properly in AUTO Incorrect settings Make sure POWER/MODE is set to AUTO. Refer to Timer Setting in this manual (sec. 6.52) 10.17 Pool pump outlet not functioning properly or pump always on chlorinator Pump not plugged into the base of chlorinator Check that pump is plugged into the bate of chlorinator		i lug	Low calt lovel	
Build-up of calcium on the Cell plates be removed See Cleaning of Cell Electrode (sec. 9.1) 10.14 OUTPUT reading is less than 100% Water temperature is low Winter water temperature can be very low For every 1°C below 28°C the output can drop 2-3% 10.14 OUTPUT reading is less than 100% Insufficient water flow though the Cell Housing Check water flow and ensure a full chamber of water is passing over the Cell. You may need to backwash your filter (sec6.7) The Cell could be damaged or at the end of its life Damaged coating will reduce cell life and reduce output. If all conditions are correct, then Cell could be at the end of its life 10.15 Power Pack only works in one direction Faulty rectifiers, transformer or PVB Return unit for service 10.16 Timer is not functioning properly in AUTO Incorrect settings Make sure POWER/MODE is set to AUTO. Refer to Timer Setting in this manual (sec. 6.52) 10.17 Pool pump outlet not functioning properly or pump always on Pump not plugged into the base of chlorinator Check that pump is plugged into the base				
10.14 OUTPUT reading is less than 100% See Cleaning of Cell Electrode (sec. 9.1) Water temperature is low Winter water temperature can be very low For every 1°C below 28°C the output can drop 2-3% 10.14 OUTPUT reading is less than 100% Insufficient water flow though the Cell Housing Insufficient water flow though the Cell Housing Check water flow and ensure a full chamber of water is passing over the Cell. You may need to backwash your filter (sec6.7) Damaged coating will reduce cell life and reduce output. If all conditions are correct, then Cell could be at the end of its life Damaged coating will reduce cell life and reduce output. If all conditions are correct, then Cell could be at the end of its life 10.15 Power Pack only works in one direction No output in one direction No output in one direction No output in one direction Faulty rectifiers, transformer or PVB Return unit for service 10.16 Timer is not functioning properly in AUTO Incorrect settings Make sure POWER/MODE is set to AUTO. Refer to Timer Setting in this manual (sec. 6.52) 10.17 Pool pump outlet not functioning properly or pump always on one of chorinator Pump not plugged into the base of chlorinator Check that pump is plugged into the bottom of the POWER PACK and not directly in to the wall outlet			Puild up of coloium on the	
10.14 OUTPUT reading is less than 100% Water temperature is low Winter water temperature can be very low For every 1°C below 28°C the output can drop 2-3% 10.14 OUTPUT reading is less than 100% Insufficient water flow though the Cell Housing Check water flow and ensure a full chamber of water is passing over the Cell. You may need to backwash your filter (sec6.7) 10.15 The Cell could be damaged or at the end of its life Damaged coating will reduce cell life and reduce output. If all conditions are correct, then Cell could be at the end of its life 10.15 Power Pack only works in one direction but one direction Faulty rectifiers, transformer or PVB Return unit for service 10.16 Timer is not functioning properly in AUTO Incorrect settings Make sure POWER/MODE is set to AUTO. Refer to Timer Setting in this manual (sec. 6.52) 10.17 Pool pump outlet not functioning properly or pump always on chorinator Pump not plugged into the base of chorinator Check that pump is plugged into the wall outlet Make sure you are set in AUTO mode and				
10.14 OUTPUT reading is less than 100% Water temperature is low Winter water temperature can be very low For every 1°C below 28°C the output can drop 2-3% 10.14 OUTPUT reading is less than 100% Insufficient water flow though the Cell Housing Check water flow and ensure a full chamber of water is passing over the Cell. You may need to backwash your filter (sec6.7) 10.15 The Cell could be damaged or at the end of its life Damaged coating will reduce cell life and reduce output. If all conditions are correct, then Cell could be at the end of its life 10.15 Power Pack only works in one direction. No output in one direction Return unit for service 10.16 Timer is not functioning properly in AUTO Incorrect settings Autro. Refer to Timer Setting in this manual (sec. 6.52) 10.17 Pool pump outlet not functioning properly or pump always on on Pump not plugged into the base of chlorinator Dutter the evel on the wall outlet Make sure you are set in AUTO mode and				-
10.14 OUTPUT reading is less than 100% Water temperature is low For every 1°C below 28°C the output can drop 2-3% 10.14 OUTPUT reading is less than 100% Insufficient water flow though the Cell Housing Check water flow and ensure a full chamber of water is passing over the Cell. You may need to backwash your filter (see6.7) 10.14 The Cell could be damaged or at the end of its life Damaged coating will reduce cell life and reduce output. If all conditions are correct, then Cell could be at the end of its life 10.15 Power Pack only works in one direction. No output in one direction. No output in one direction works or PVB Cell may need cleaning (sec. 9.1) or the Cell may have run its life in one direction 10.16 Timer is not functioning properly in AUTO Incorrect settings Return unit for service 10.17 Pool pump outlet not functioning properly or pump always on pump always on properly or pump always on pump alway				
10.14 OUTPUT reading is less than 100% Insufficient water flow though the Cell Housing Check water flow and ensure a full chamber of water is passing over the Cell. You may need to backwash your filter (sec6.7) The Cell could be damaged or at the end of its life The Cell could be damaged or at the end of its life Damaged coating will reduce cell life and reduce output. If all conditions are correct, then Cell could be at the end of its life 10.15 Power Pack only works in one direction but one direction. No output in one direction Faulty rectifiers, transformer or PVB Cell may need cleaning (sec. 9.1) or the Cell may have run its life in one direction 10.16 Timer is not functioning properly in AUTO Incorrect settings Make sure POWER/MODE is set to AUTO. Refer to Timer Setting in this manual (sec. 6.52) 10.17 Pool pump outlet not functioning properly or pump always on properly o			Water temperature is low	
10.14 than 100% Insufficient water flow though the Cell Housing chamber of water is passing over the Cell. You may need to backwash your filter (sec6.7) The Cell could be damaged or at the end of its life The Cell could be damaged or at the end of its life Damaged coating will reduce cell life and reduce output. If all conditions are correct, then Cell could be at the end of its life Level low in one direction but OK in the other Level low in one direction but OK in the other Cell may need cleaning (sec. 9.1) or the Cell may have run its life in one direction 10.15 Power Pack only works in one direction one direction Faulty rectifiers, transformer or PVB Return unit for service 10.16 Timer is not functioning properly in AUTO Incorrect settings Make sure POWER/MODE is set to AUTO. Refer to Timer Setting in this manual (sec. 6.52) 10.17 Pool pump outlet not functioning properly or pump always on functioning properly or pump always on functioning Pump not plugged into the base of chlorinator Dottom of the POWER PACK and not directly in to the wall outlet			·	output can drop 2-3%
10.14 than 100% Insufficient water flow though the Cell Housing chamber of water is passing over the Cell. You may need to backwash your filter (sec6.7) The Cell could be damaged or at the end of its life The Cell could be damaged or at the end of its life Damaged coating will reduce cell life and reduce output. If all conditions are correct, then Cell could be at the end of its life 10.15 Power Pack only works in one direction but one direction Eavel low in one direction but OK in the other Cell may need cleaning (sec. 9.1) or the Cell may have run its life in one direction 10.15 Power Pack only works in one direction but one direction Faulty rectifiers, transformer or PVB Return unit for service 10.16 Timer is not functioning properly in AUTO Incorrect settings Make sure POWER/MODE is set to AUTO. Refer to Timer Setting in this manual (sec. 6.52) 10.17 Pool pump outlet not functioning properly or pump always on on properly or pump always on on the properly or pump always on on the set of chlorinator Pump not plugged into the base of chlorinator 10.17 Pool pump outlet not functioning properly or pump always on the plugged into the base of chlorinator Pump not plugged into the base of chlorinator	10.14			Check water flow and ensure a full
the Cell Housingthe Cell. You may need to backwash your filter (sec6.7)The Cell could be damaged or at the end of its lifeDamaged coating will reduce cell life and reduce output. If all conditions are correct, then Cell could be at the end of its lifeLevel low in one direction but OK in the otherCell may need cleaning (sec. 9.1) or the Cell may have run its life in one direction10.15Power Pack only works in one directionFaulty rectifiers, transformer or PVBReturn unit for service10.16Timer is not functioning properly in AUTOIncorrect settingsMake sure POWER/MODE is set to AUTO. Refer to Timer Setting in this manual (sec. 6.52)10.17Pool pump outlet not functioning properly or pump always onPump not plugged into the base of chlorinatorCheck that pump is plugged into the bottom of the POWER PACK and not directly in to the wall outlet Make sure you are set in AUTO mode and	10.14		Insufficient water flow though	chamber of water is passing over
The Cell could be damaged or at the end of its lifeDamaged coating will reduce cell life and reduce output. If all conditions are correct, then Cell could be at the end of its lifeLevel low in one direction but OK in the otherCell may need cleaning (sec. 9.1) or the Cell may have run its life in one direction10.15Power Pack only works in one direction. No output in one directionFaulty rectifiers, transformer or PVBReturn unit for service10.16Timer is not functioning properly in AUTOIncorrect settingsMake sure POWER/MODE is set to AUTO. Refer to Timer Setting in this manual (sec. 6.52)10.17Pool pump outlet not functioning properly or pump always onPump not plugged into the base of chlorinatorPump not plugged into the base of chlorinator				the Cell. You may need to backwash your
The Cell could be damaged or at the end of its lifereduce output. If all conditions are correct, then Cell could be at the end of its lifeLevel low in one direction but OK in the otherLevel low in one direction but OK in the otherCell may need cleaning (sec. 9.1) or the Cell may have run its life in one direction10.15Power Pack only works in one directionFaulty rectifiers, transformer or PVBReturn unit for service10.16Timer is not functioning properly in AUTOIncorrect settingsMake sure POWER/MODE is set to AUTO. Refer to Timer Setting in this manual (sec. 6.52)10.17Pool pump outlet not functioning properly or pump always onPump not plugged into the base of chlorinatorCheck that pump is plugged into the bottom of the POWER PACK and not directly in to the wall outlet Make sure you are set in AUTO mode and				filter (sec6.7)
or at the end of its lifereduce output. If all containers are context, then Cell could be at the end of its lifeLevel low in one direction but OK in the otherCell may need cleaning (sec. 9.1) or the Cell may have run its life in one direction10.15Power Pack only works in one directionFaulty rectifiers, transformer or PVBReturn unit for service10.16Timer is not functioning properly in AUTOIncorrect settingsMake sure POWER/MODE is set to AUTO. Refer to Timer Setting in this manual (sec. 6.52)10.17Pool pump outlet not functioning properly or pump always onPump not plugged into the base of chlorinatorCheck that pump is plugged into the bottom of the POWER PACK and not directly in to the wall outlet Make sure you are set in AUTO mode and			The Cell could be demaged	
then Cell could be at the end of its lifeLevel low in one direction but OK in the otherCell may need cleaning (sec. 9.1) or the Cell may have run its life in one direction10.15Power Pack only works in one direction. No output in one directionFaulty rectifiers, transformer or PVBReturn unit for service10.16Timer is not functioning properly in AUTOIncorrect settingsMake sure POWER/MODE is set to AUTO. Refer to Timer Setting in this manual (sec. 6.52)10.17Pool pump outlet not functioning properly or pump always onPump not plugged into the base of chlorinatorCell may need cleaning (sec. 9.1) or the Cell may have run its life in one direction10.17Pool pump outlet not functioning properly or pump always onPump not plugged into the base of chlorinatorMake sure you are set in AUTO mode and				•
Level low in one direction but OK in the otheror the Cell may have run its life in one direction10.15Power Pack only works in one direction. No output in one directionFaulty rectifiers, transformer or PVBReturn unit for service10.16Timer is not functioning properly in AUTOIncorrect settingsMake sure POWER/MODE is set to AUTO. Refer to Timer Setting in this manual (sec. 6.52)10.17Pool pump outlet not functioning properly or pump always onPump not plugged into the base of chlorinatorCheck that pump is plugged into the base of chlorinator				
OK in the other Of the Cell may have full its life in one direction 10.15 Power Pack only works in one direction. No output in one direction Faulty rectifiers, transformer or PVB Return unit for service 10.16 Timer is not functioning properly in AUTO Incorrect settings Make sure POWER/MODE is set to AUTO. Refer to Timer Setting in this manual (sec. 6.52) 10.17 Pool pump outlet not functioning properly or pump always on Pump not plugged into the base of chlorinator Check that pump is plugged into the wall outlet Make sure you are set in AUTO mode and			Level low in one direction but	
10.15Power Pack only works in one direction. No output in one directionFaulty rectifiers, transformer or PVBReturn unit for service10.16Timer is not functioning properly in AUTOIncorrect settingsMake sure POWER/MODE is set to AUTO. Refer to Timer Setting in this manual (sec. 6.52)10.17Pool pump outlet not functioning properly or pump always onPump not plugged into the base of chlorinatorPump not plugged into the base of chlorinator				
10.15one direction. No output in one directionPaulty rectifiers, transformer or PVBReturn unit for service10.16Timer is not functioning properly in AUTOIncorrect settingsMake sure POWER/MODE is set to AUTO. Refer to Timer Setting in this manual (sec. 6.52)10.17Pool pump outlet not functioning properly or pump always onPump not plugged into the base of chlorinatorCheck that pump is plugged into the wate of chlorinator				one direction
one directionor PVB10.16Timer is not functioning properly in AUTOIncorrect settingsMake sure POWER/MODE is set to AUTO. Refer to Timer Setting in this manual (sec. 6.52)10.17Pool pump outlet not functioning properly or pump always onPump not plugged into the base of chlorinatorCheck that pump is plugged into the bottom of the POWER PACK and not directly in to the wall outlet Make sure you are set in AUTO mode and	10 15		-	Return unit for service
10.16Timer is not functioning properly in AUTOIncorrect settingsMake sure POWER/MODE is set to AUTO. Refer to Timer Setting in this manual (sec. 6.52)10.17Pool pump outlet not functioning properly or pump always onPump not plugged into the base of chlorinatorMake sure POWER/MODE is set to AUTO. Refer to Timer Setting in this manual (sec. 6.52)10.17Pool pump outlet not functioning properly or pump always onPump not plugged into the base of chlorinatorDescription	10.10		or PVB	
10.10 properly in AUTO Incorrect settings AOTO. Refer to Timer Setting in this manual (sec. 6.52) 10.17 Pool pump outlet not functioning properly or pump always on Pump not plugged into the base of chlorinator Check that pump is plugged into the base of chlorinator				Make sure POWER/MODE is set to
Pool pump outlet not functioning properly or pump always onPump not plugged into the base of chlorinatorCheck that pump is plugged into the bottom of the POWER PACK and not directly in to the wall outlet Make sure you are set in AUTO mode and	10.16		Incorrect settings	AUTO. Refer to Timer Setting in this
Pool pump outlet not functioning properly or pump always onPump not plugged into the base of chlorinatorbottom of the POWER PACK and not directly in to the wall outlet Make sure you are set in AUTO mode and		property in AUTO	0	
10.17 functioning properly or pump always on function always on function and the properly of pump always on function and the properly of the p				
on base of chlorinator Make sure you are set in AUTO mode and		functioning properly or pump always	Pump not plugged into the	
on Make sure you are set in AUTO mode and	10.17			-
not MANUAL for normal running			ot chlorinator	-
				not MANUAL for normal running

10.18	Fault Indication Cell not cleaning, excessive calcium build-up on Cell or Power Pack not changing direction	Potential Cause Excessively high calcium, change of direction time set too high or faulty PCB	 Remedy 1. See Calcium Hardness test (sec 8.5) and adjust water accordingly 2. Change the Cell Cleaning times (sec. 7.3) 3. Manually try changing direction buttons in for 3 sec (you must be in the default display screen for this to work). Failure for this to work could indicate a faulty PCB - return for service 	
	9 Low or No Chlorine Output	Unit not working correctly	Go through Troubleshooting from 9.1	
		Stabiliser is too low	Check Stabiliser guide (sec 8.6)	
		Unit not set correctly	Basic settings such as Output Control and	
			Timer running hours need to be checked	
10.10			Go through all settings in sec. 5, 6	
10.19			& 7 and balance water accordingly	
		Salt level is too low	Check Salt guide (sec. 6.6/8.2)	
		pH is too high	Check pH guide (sec. 8.3)	
		Cell at the ends of its life	If full output is not reached, then it could be	
			a failing Cell	
10.20	Timer loses time when mains power removed	Battery life expired	Replace Battery - return for service	

DISCLAIMER: Information in this guide is intended to provide general information on a particular subject(s) in good faith and is not an exhaustive treatment of such subject(s). Its use is beyond the control of the author, contributor, publishers, licenced professionals and under no circumstances should the guide be used as a substitute for such professionals. No representations or warranties are made that the content, advice and recommendations in this guide are current, free from errors or omissions, or appropriate for the user's circumstances or abilities. No liability or responsibility is accepted persons or **OASIS AQUATICS Pty Ltd** appointed agents. **OASIS AQUATICS Pty Ltd** reserves the right to refuse warranty if any damage caused to the chlorinator or auxiliary pool equipment that is not a result of a manufacturer's defect.

11. SCHEMATICS AND PART NUMBERS

Oasis CX Premium Salt & Mineral Chlorinator




Oasis CX Premium Salt & Mineral Chlorinator – Parts list

POWER PACK				
CODE		CX Description		
1	SL-15PP	Oasis CX 15 Power Pack		
1	SL-25_35_45PP	Oasis CX25,CX35 & CX45 Power Pack		
1	SL- 55PP	Oasis CX 55 Power Pack		
2	N00895	Wire Loom SL-12 - Mul		
3	N00364	Oasis CX Front Cover BLACK		
4	N 01209	Top Vent Cover - Plastic with Oasis logo BLACK		
5	N00367	Acrylic Front Flap - SL Model Plastic BLUE		
6	N00871	Oasis CX Decal Sticker (set of 2)		
7	N00693	Multi Triac Shunt PCB		
8	N00496	Oasis CX LCD Display PCB		
9	N00356	Aluminium Die Casting with BLACK Outer Coa ng		
10	N00453-2	Oasis CX Mounting Bracket		
11	N00024-1	Transformer 440VA for 55g/hr Model		
11	N00023-1	Transformer 300VA for 25, 35 & 45g/hr Model		
11	N00022	Transformer 220VA for 15g/hr Model		
12	N00498	AC Socket Round - Pump Outlet Flush Mount BLACK (Side Wire Entry)		
13	N00869	Grommet 6N-4 Cable Strain Relief Bush		
14	N00501	Grommet Rubber AUX Hole up to 19mm		
15	N00488	Oasis CX Plug SL-10 Male End Complete with Power Supply Looms		
16	N00054	Screw M3x12 Stainless Steel 304 (Fan)		
17	N00018-2	Circuit Breaker 3amp (up to 45g/hr models) with 6.3mm push on		
17	N00019-2	Circuit Breaker 5amp (for model 55g/hr and greater) with 6.3mm push on		
18	N00053-1	Screw M4x10 Stainless Steel 304 (Slimline Front Case & Bracket)		
19	N00368	Oasis CX Bottom Vent Cover BLACK		
20	N00369	Oasis CX Fan Support Plate BLACK		
21	N00370	Oasis CX Snap Fit Gauze BLACK		
22	N00478	Screw Pan Head M5x10 Stainless Steel 304		
24	N00049	Internal Tooth Washer for Earth M5 S/S		
25	N00011	Power Cord-Au		
26	N00323	Cooling Fan 40x40x10mm (only VP55 model)		
27	N00027-1	Thermostat 100degC		
PARTS 8		(not shown in schematic)		
	CODE	VAPURE Description		
30	N00047	Washer 37x37x2.5 Zink Plated		
31	N00207	Wire Loom SL-01 - Circuit Breaker LOAD to Transformer Ac ve BROWN		
32	N00223	Wire Loom SL-02 - AC Socket N to PCB N BLUE		
33	N00224	Wire Loom SL-03 - AC Socket L to PCB PUMP-L BROWN		
34	N00348	Wire Loom SL-04 - Circuit Breaker LINE to PCB A BROWN		
36	N00485	Wire Loom SL-11 - Ribbon Cable with RED line and Header Sockets		
37	N00008	Wire Loom CC-05 - Earth Wire		
38	N00036	Cable Tie 3mm		
39	N00560	Green Wall Plugs		
40	N00217	Screw Self Tapping M5x25 Stainless (Wall)		
41	N00053-1	Screw M4x10 Stainless Steel 304 (Slimline Front Case & Bracket)		
42	N00052	Screw M3x6 Stainless Steel (Triac Connec on and PCB)		
43	N00067	Oasis CX Power Supply Carton Box		
44	N01208	Sleeve - OASIS CX Model		
45	N00874	Oasis CX Operating Manual		
46	N01207	OPERATING MANUAL - OASIS CX Model		

Oasis CX Premium Salt & Mineral Chlorinator – Parts list

Electrode Cell Parts				
CODE		CX Description		
50	SL-CELL15RP	OASIS CX 15 g/hr Cell ONLY		
50	SL-CELL25RP	OASIS CX 25 g/hr Cell ONLY		
50	SL-CELL25RP-LS	OASIS CX 25 g/hr LOW SALT Cell ONLY		
50	SL-CELL35RPB	OASIS CX 35 g/hr Cell ONLY		
50	SL-CELL45RPB	OASIS CX 45 g/hr Cell ONLY		
50	SL-CELL55RPB	OASIS CX 55 g/hr Commercial Cell ONLY		
51	N00455	Cell Clip Crystal 9 Plate BLUE		
53	N00492	Cell Locking Ring - Screw Cap Large Grip		
54	N00322	Cell Clip Spacer Rod BLUE		
55	N00465	Cell Housing-Smokey Grey		
56	N00460-1	O'ring – Cell Housing EPDM Black		
57	N00670-1	PVC Reducing Bush 50x40mm		

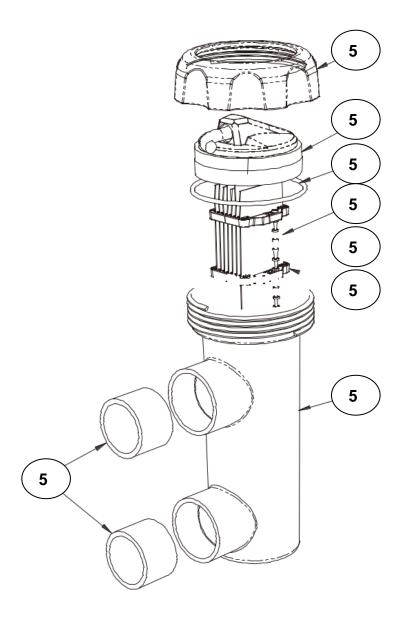

SPECIFICATION TABLE 12.

Made from premium grade materials, the Oasis. Salt & Mineral Chlorinator provides fast setup and installation.

Features

These units are fully automated, efficiently controlling chlorine production to keep your pool healthy. Our sophisticated units feature self-cleaning, backwash, super chlorinate and Winter / Blanket mode functions.

- ▷ Fast setup with new or existing pool systems
- ▷ Quick release cell
- ▷ Cell can be installed horizontally or vertically
- ▷ Variable speed pump compatible
- ▷ Smart temperature sensors (Power supply & water)
- ▷ Low Salt operations 3000-3500ppm (0.3% -0.35%) with built in self-regulator for high salt
- Bright backlit display


Specifications


Smart self cleaning cell electrodes


- Premium titanium quick connect cell
- ▷ Backwash, super chlorinate and Winter / Blanket mode functions
- ▷ Single or dual timer cycles
- ▷ Salt / TDS test and water flow protection
- ▷ Automatic battery backup timer
- ▷ Modern slimline design
- ▷ Suitable for any pool type (concrete, fibreglass, vinyl and tiled)

Model	Description	Output	Pool Volume (litres) Cool Climate	Pool Volume (litres) Warm Climate	Max Pump Size	Max Current including Pump
CX15	CX15 Salt & Mineral Chlorinator	15g /hr	50,000	35,000	8 amps	10 amps
CX25	CX25 Salt & Mineral Chlorinator	25g /hr	85,000	55,000	8 amps	10 amps
CX35	CX35 Salt & Mineral Chlorinator	35g /hr	120,000	80,000	8 amps	10 amps
CX45	CX45 Salt & Mineral Chlorinator	45g /hr	160,000	105,000	8 amps	10 amps
CX55	CX55 Salt & Mineral Chlorinator	55g /hr	200,000	130,000	8 amps	10 amps

Dimensions

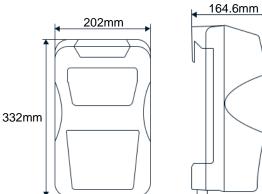



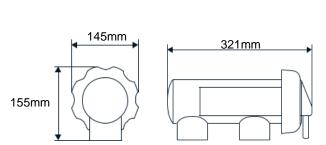

THIS EQUIPMENT HAS BEEN MANUFACTURED AND TESTED TO THE HIGHEST STANDARD AND ACCORDINGLY CARRIES THE FOLLOWING WARRANTY.

13.1 The Oasis CX Premium Salt & Mineral Chlorinator Power Pack & Electrolytic Cell will be repaired at no charge, for a period of 3 years or 10 000 hours, whichever occurs first fom the date of purchase should it be found, after examination, that the failure has been caused by faulty workmanship or materials. This is a back to base warranty.

13.2 Adverse operating conditions beyond the control of the manufacturer such as improper voltage or water equipment will render this warranty null and void.

13.3 Defective equipment must be returned to the manufacturer or dealer as soon as the purchaser becomes aware of the defect and all transport must be prepaid. Neither the manufacturer nor the dealer shall be responsible for any goods damaged in transit.

13.4 If after examination the equipment is found to be defective it will be repaired or replaced free of charge (other than transport costs which will be borne by the purchaser). However, if upon inspection of the equipment it is found that the terms of this warranty are not satisfied, then the usual charges of the manufacturer for repair or replacement will be made.

13.5 Any liability of the manufacturer pursuant to the Trade Practices Act 1974, as amended for a breach of a condition or warranty shall be limited to replacing or acquiring the equipment (or part thereof) where the same has been supplied.

13.6 The maximum liability incurred by the manufacturer shall not in any case exceed the contract price for the equipment or the product parts or components thereof claimed to be defective. Further, the manufacturer shall not be liable for any loss, damage or delay directly or indirectly caused by any malfunction of or defect of or failure of the equipment other than as expressly provided in this warranty.

13.7 Products sold by the manufacturer are designed for use with swimming pool water balanced in accordance with the Langelier Saturation Index with a pH range of 6.8-7.8. Chlorine level should not exceed 4ppm and the salt level should not exceed 4000ppm.

13.8 The manufacturer will not be held liable for damage caused by, but not limited to, corrosion, scaling or stress.

The Warranty is void under the following circumstances:

- Installation is carried out incorrectly by any person other than a person authorised by us to do so.
- The Power Pack or Cell is serviced by any person other than a person authorised by us to do so.
- Correct salt levels are not maintained at all times.
- The Power Pack is not protected from the elements.
- The Power Pack is not operated in a position/area with good ventilation.
- Water has been allowed to enter the Power Pack.
- Insect infestation or penetration by dust, sand or other foreign particles inside the Power Pack.
- Damage beyond our control.
- Equipment that has been misused, neglected, damaged, repaired without authorisation or altered in any way.
- This warranty is applicable to workmanship and materials only.
- This warranty is not transferable under any circumstance.
- Keep your original purchase invoice and serial number in a safe place.

14. TECHNICAL SUPPORT

For all warranty enquiries please contact your local distributor or contact **Sunlover Heating** directly and we will either direct you to your nearest authorised repairer or assist you.

OASIS AQUATICS

Ph: 1800 815 913 Website: oasisaquatics.com.au Email: info@oasisaquatics.com.au

DISCLAIMER

Information in this guide is intended to provide general information on a particular subject(s) in good faith and is not an exhaustive treatment of such subject(s). Its use is beyond the control of the author, contributor, publishers and distributors and should not be relied upon without consulting your local Professional for comprehensive advice.

This guide includes subject(s) that should only be performed by or under the direction and advice of your local Professional and under no circumstances should the guide be used as a substitute for such professionals.

No representations or warranties are made that the content, advice and recommendations in this guide are current, free from errors or omissions, or appropriate for the user's circumstances or abilities. No liability or responsibility is accepted for any loss suffered as a result of any user's reliance on such content.

15. NOTES



A part of the



Victoria 62 Parkhurst Drive Knoxfield VIC 3180 Australia T: 03 9887 2131 New South Wales Unit 2, 10 Boden Road Seven Hills NSW 2147 Australia T: 02 9838 0000

Queensland

Unit 4, 8 Reichert Drive Molendinar QLD 4214 Australia T: 07 5679 6821

oasisaquatics.com.au info@oasisaquatics.com.au