



100mm Stainless Steel Roller Assembly Instructions

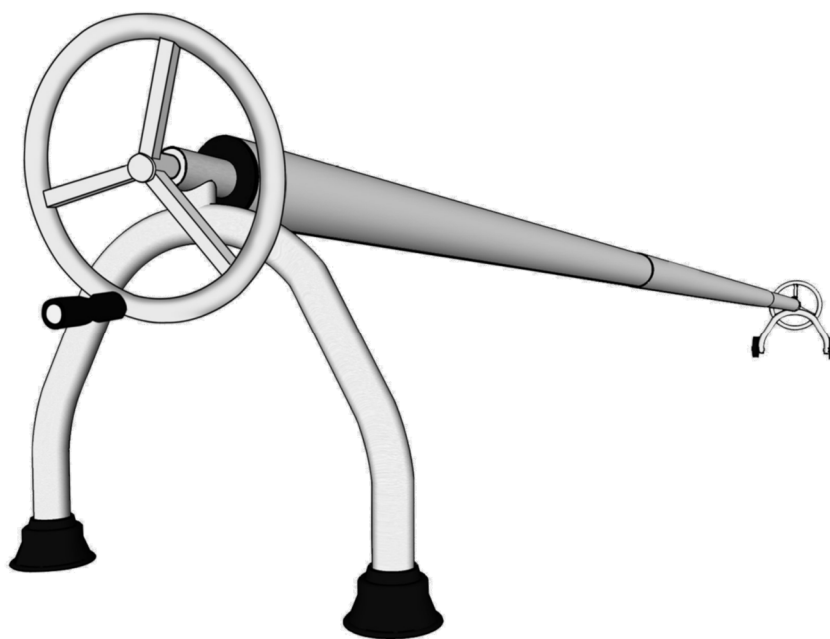


Tools Needed:




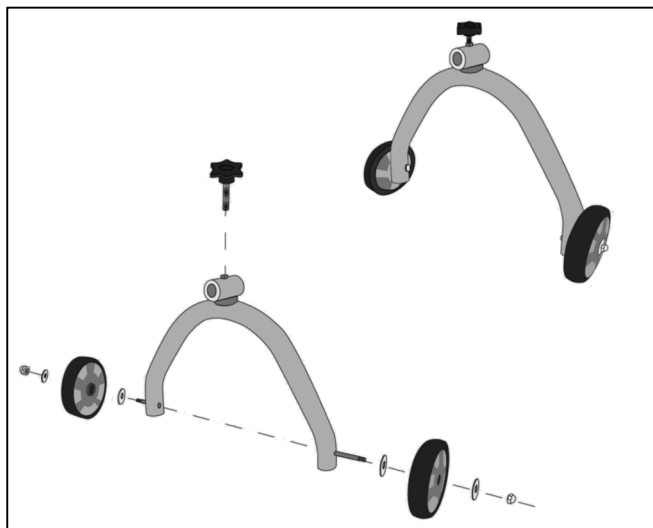


Step 1

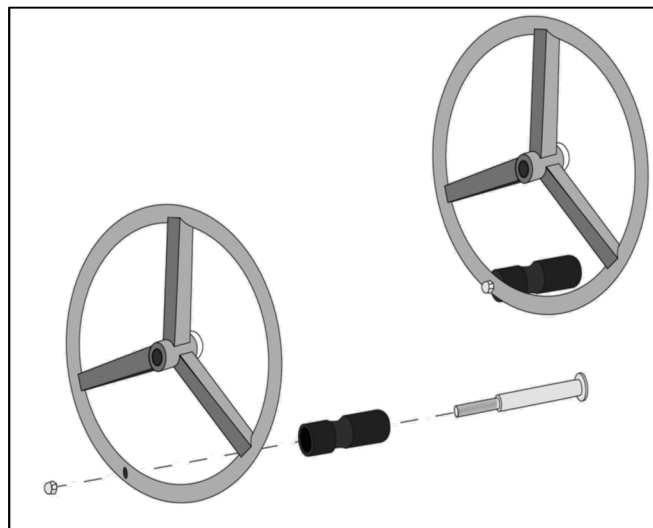



Step 2

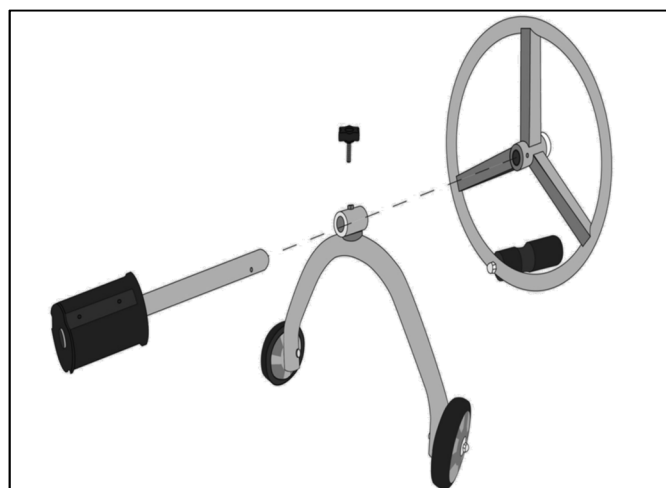


Step 3

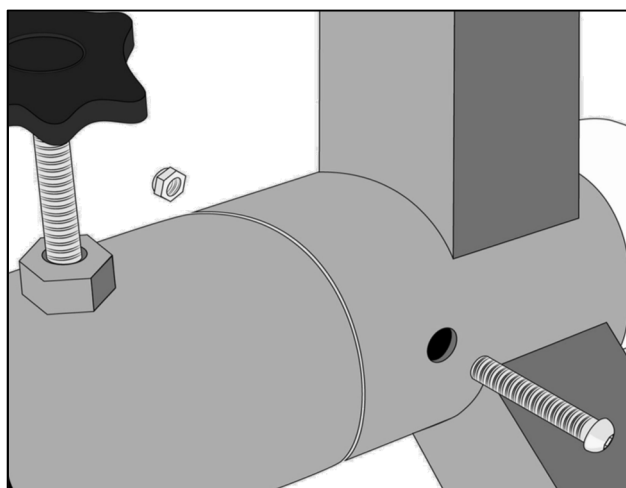


Step 4

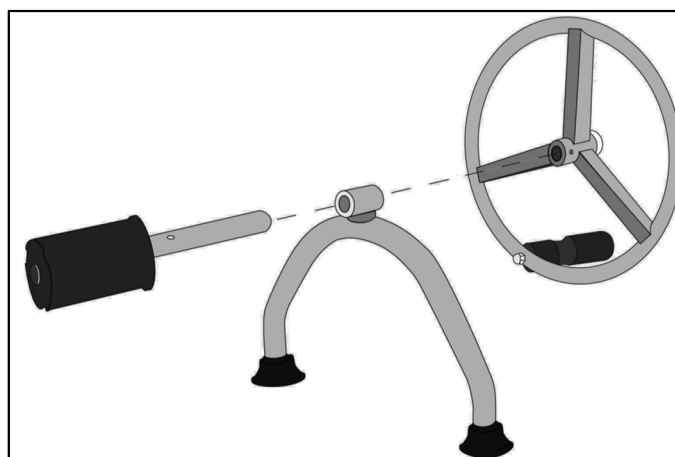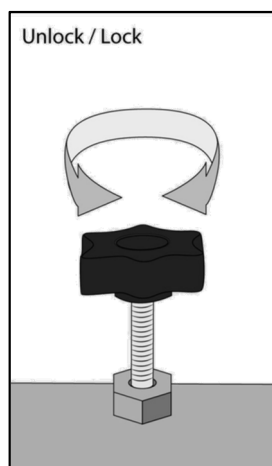


Step 5

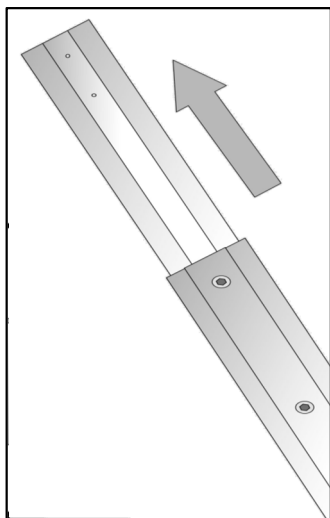

Step 6

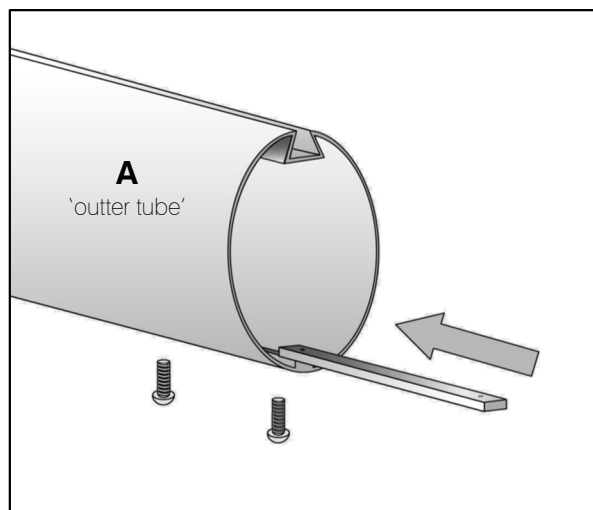


Step 7

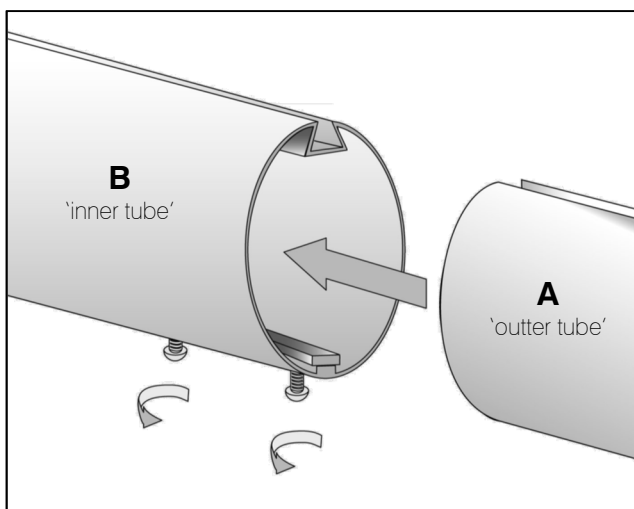

Step 8


Insert tube B into Tube A (outer tube)

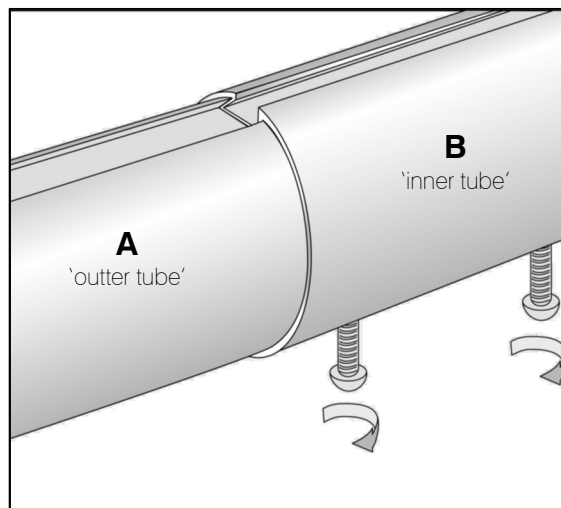



Step 9

Screw in provided bolts at either end of tube B

TUBE INSTALLATION LOCATION / LAYOUT

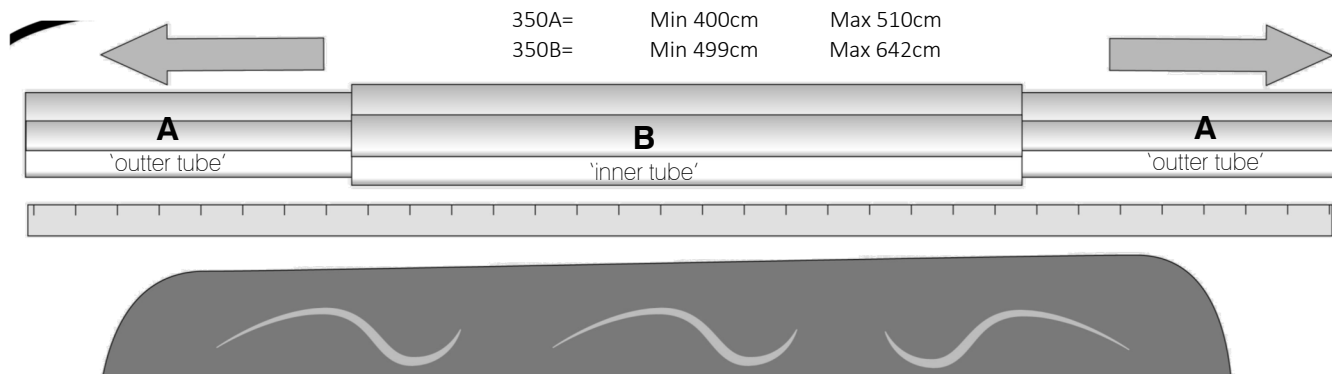


Step 10

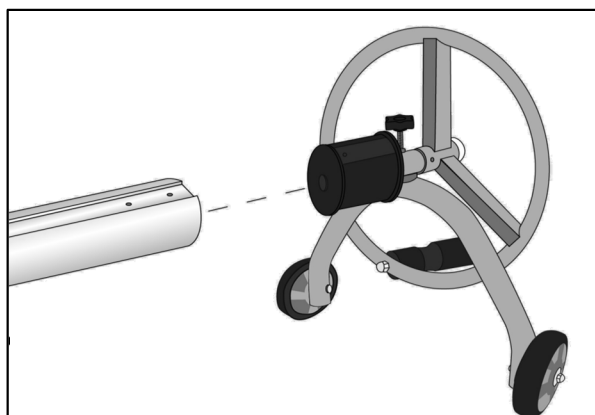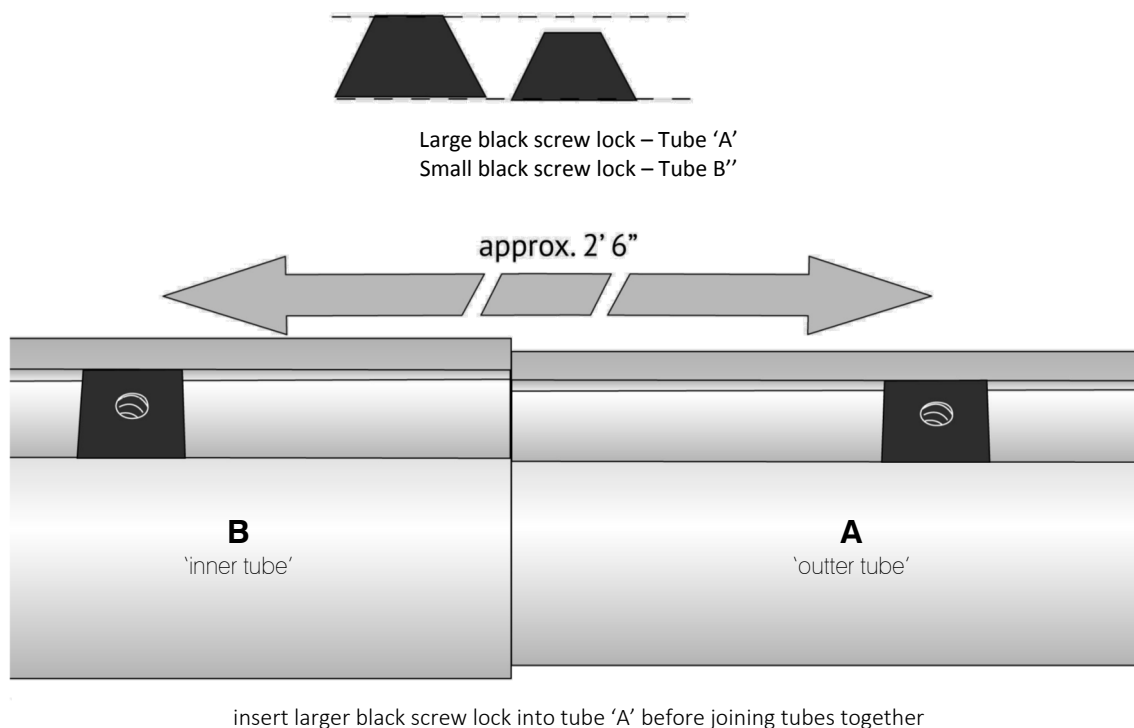


Step 11

Insert tube to roller hub on end 1 with wheels

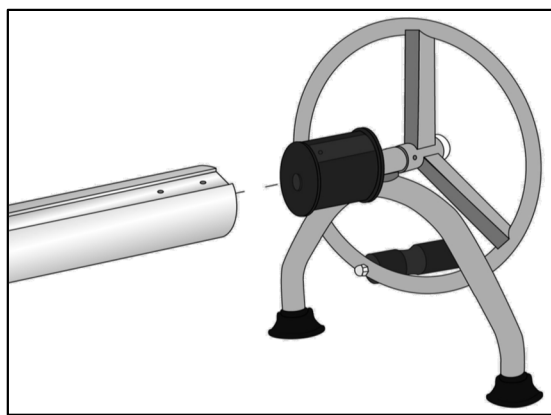


Step 12

Insert tube to roller hub on end 1 with feet


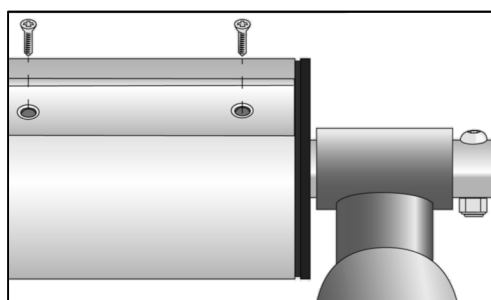


Secure tube to the roller hub at either end

BLANKET ATTACHMENT INSTALLATION


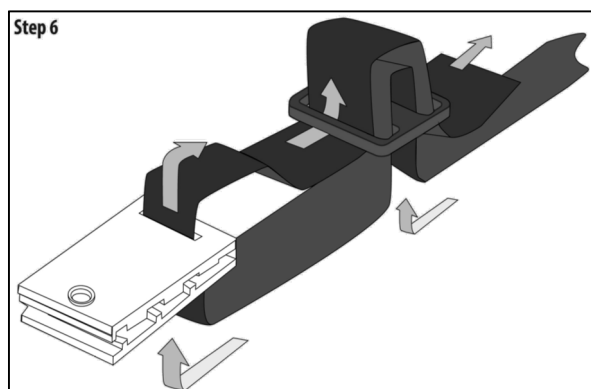


Step 13

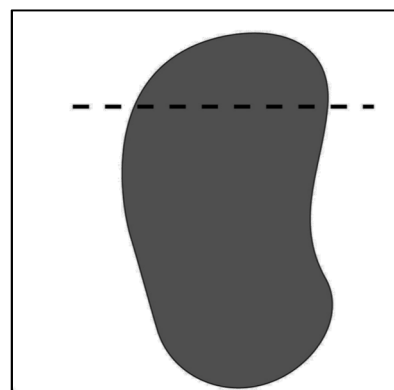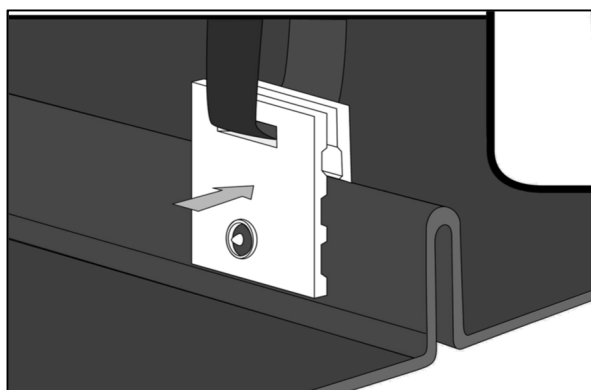

Option 1



To clamp onto the middle of the blanket, insert material all the way to the back of the clamp and gently tap with hammer so that the clamp locks into position.

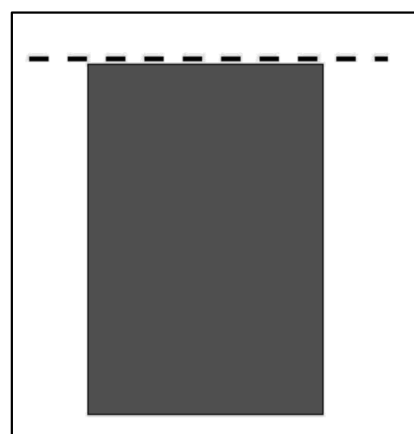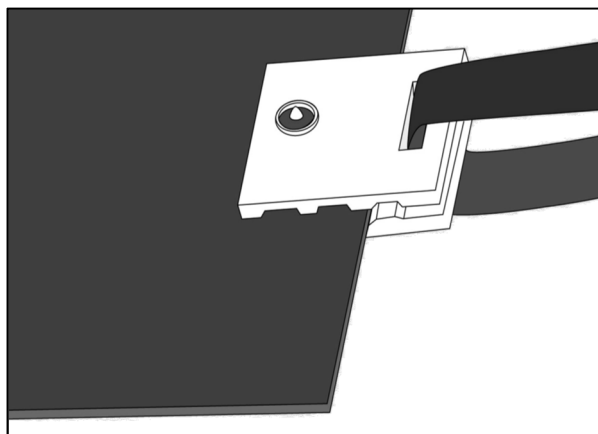

Option 2

BLANKET TO ROLLER ATTACHMENT INSTALLATION

Step 14

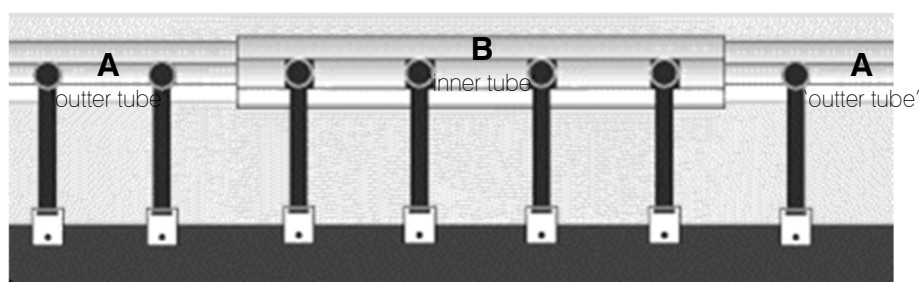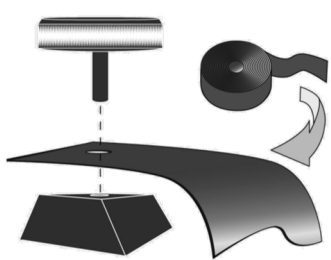

UV OVERCOVER INSTALLATION INSTRUCTIONS

UV Overcover must be installed over pool blanket when on roller!
Failure to do this will shorten the life of the blanket and void warranty.

Roll blanket onto roller and place the UV Cover over the blanket

If there is a great deal of excess UV Cover, cut the material slightly longer than the pool blanket, ensuring it protects the full width of the blanket.
We also recommend leaving a 100mm overhand.



To keep the UV Cover in place, use the 3x adjustable straps provided to secure the cover over the blanket.

