


UV OVERCOVER INSTALLATION INSTRUCTIONS

Step1

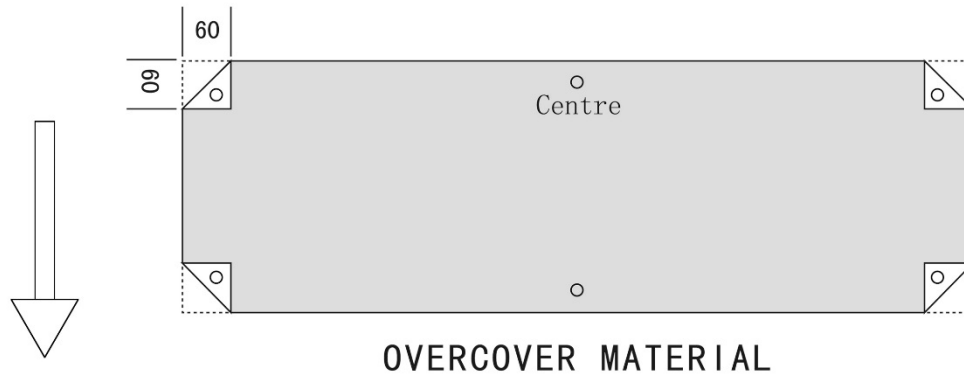

Step2



UV Overcover must be installed over pool blanket when on roller!

Failure to do this will shorten the life of the blanket and void warranty.

1

Roll blanket onto roller and Place the white overcover over the blanket

2

Cut the overcover slightly longer than the pool blanket

3

Using a hammer and the cutter (provided) punch 3 holes in the overcover's long edge. 2 at either end and 1 in the middle

4

Clip the 6 blue eyelets on the holes just made

5

Remove the paddle from the connection kit and push the black material through the eyelets and replace the paddles

6

With all straps now connected under the overcover adjust the buckle to tighten over the blanket.

Repeat on the other long edge of the overcover



Head Office
62 Parkhurst Drive
Knoxfield VIC 3180
Telephone: 03 9887 2131

New South Wales
2/20-22 Foundry Road
Seven Hills NSW 2147
Telephone: 02 9838 0000

Queensland
Factory 1, 8 Reichert Street
Molendinar QLD 4214
Telephone: 07 5679 6821