



UNDERGROUND BLANKET ROLLER BOX

INSTALLATION AND OPERATION MANUAL



Head Office
6-8 Austral Place
Hallam VIC 3803
T: 03 9887 2131

New South Wales
Unit 2, 10 Boden Road
Seven Hills NSW 2147
T: 02 9838 0000

Queensland
11 Andys Court
Upper Coomera QLD 4209
T: 07 5679 6821



sunloverheating.com.au
sales@sunloverheating.com.au

Provide protection and longevity to your pool blanket

The underground roller system discreetly hides your pool cover, delivering a sleek and contemporary appearance that seamlessly integrates with the pool's surroundings.



It is important that you read through the manual to identify the key areas you need to understand, particularly the following:

- Health and Safety Concerns
- Installation requirements
- How to operate the major features of the unit
- The importance of maintenance
- If you have a problem, what you can do to trouble shoot before you contact your pool professional
- Your entitlements under the product warranty.

IMPORTANT

We strongly recommend that a pool or landscape professional install this product to ensure proper installation.

While the lid can support up to 200kg of direct weight, please be aware that the aluminum material has the potential for heat build-up and can become hot to walk on. We recommend taking precautions to avoid direct contact with the lid surface.

- DO NOT MACHINE COMPACT AROUND THE COVER BOX
- DO NOT ACID WASH NEAR THE LID


WHILE EVERY EFFORT HAS BEEN MADE TO ENSURE THAT THE INFORMATION CONTAINED IN THIS MANUAL IS ACCURATE AND COMPLETE, NO LIABILITY CAN BE ACCEPTED FOR ANY ERRORS OR OMISSIONS.

SUNLOVER RESERVES THE RIGHT TO CHANGE THE SPECIFICATION OF THE PRODUCTS DESCRIBED HEREIN AT ANY TIME WITHOUT PRIOR NOTICE.

Please note: This manual has been designed to cater for installation rules and codes in Australia.


DIMENSIONS

END VIEW

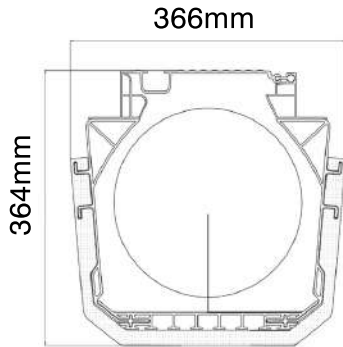

Compact Underground


364mm x 366mm

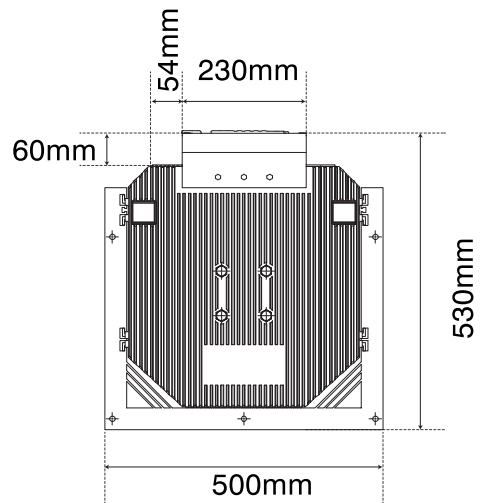


Underground Standard

530mm x 500mm


TOP VIEW

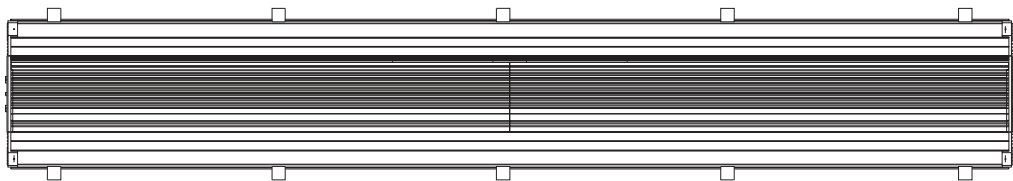

SIDE VIEW

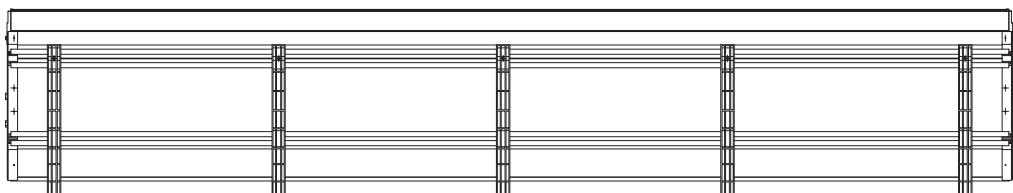

3D VIEW

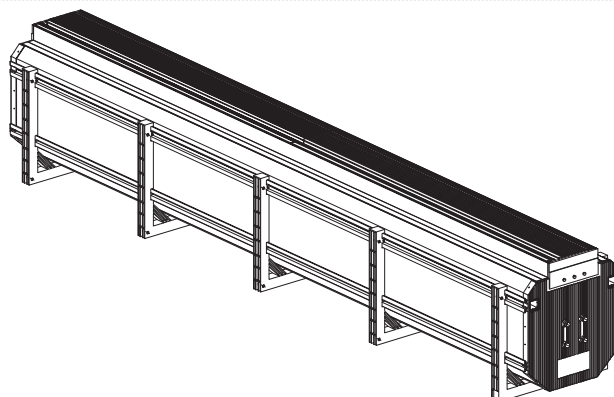

INSTALLATION

STEP 1

Prior to digging it is crucial that the headers have been installed. Headers are the coping or cap on the edge of the Swimming Pool.


Headers determine the positioning or placement of the Underground Blanket Box (UBB).



STEP 2

Dig and check that all pipes and cables are not in the way of where the UBB will be installed.


This should be specified to pool builder prior to construction of your pool.

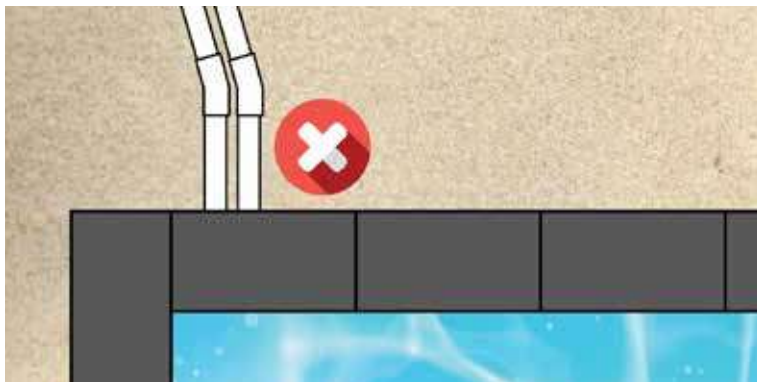

STEP 3

Measure width of pool and allow 150 to 200mm either side so that the blanket can retract on the UBB without getting tangled.

Also as a guide measure 300 to 400mm (or the width of the pavers that would go in between) from the header to the lid.

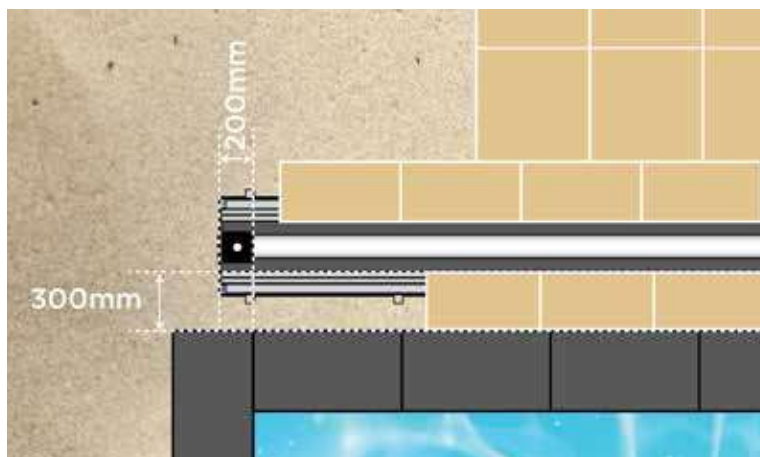


INSTALLATION

STEP 4

Dig a hole that's approximately

- 600mm deep
- 600mm wide
- Add 200mm to the length of the UBB


This is so that the UBB has enough room to moved and adjusted if needed.

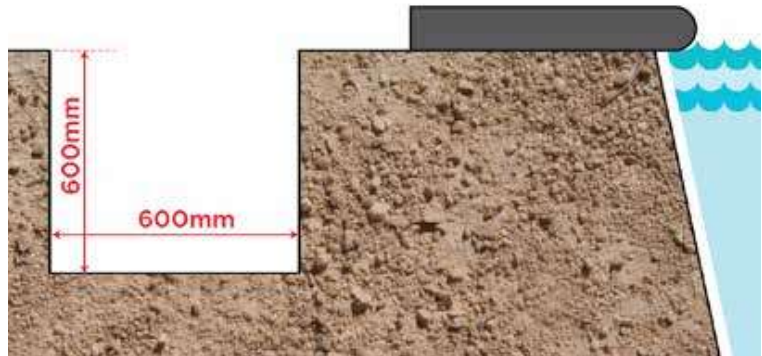

STEP 5

Place UBB into the hole ensuring the lid opens in the correct direction.

Also check that lid height is level with finished floor level and box is parallel to the pool headers.

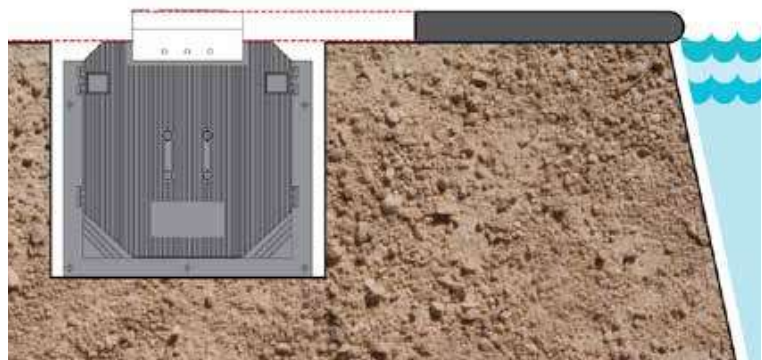


STEP 6

Back fill both ends of box approximately 100mm deep.

Using a hose, water both ends to ensure compaction.

Double check all measurements and levels to ensure box has not moved.

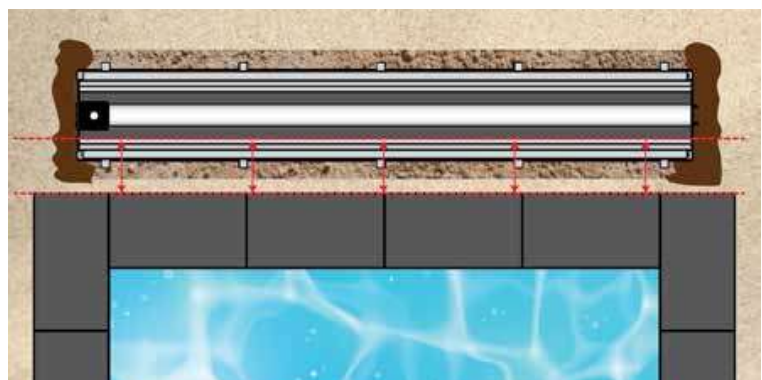

INSTALLATION

STEP 7


Use rapid set concrete and pour down the braces to help lock the UBB into position.

Proceed to back fill to complete installation.




STEP 8

Ensure all sand and debris is removed from lid and cover it to protect it.

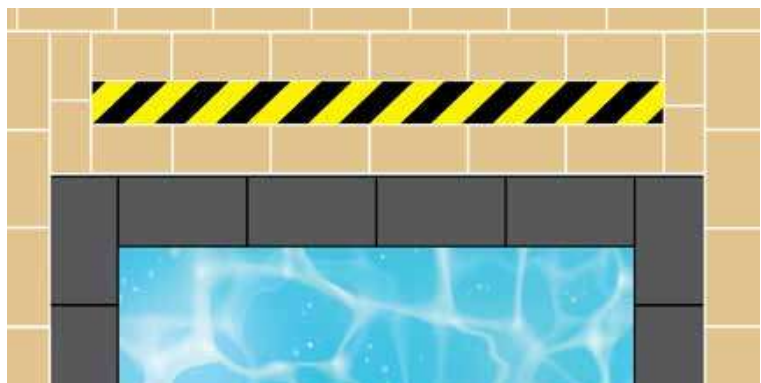

STEP 9

If the blanket is cut to size, open the lid, extend straps and hook it up to the eyelets.

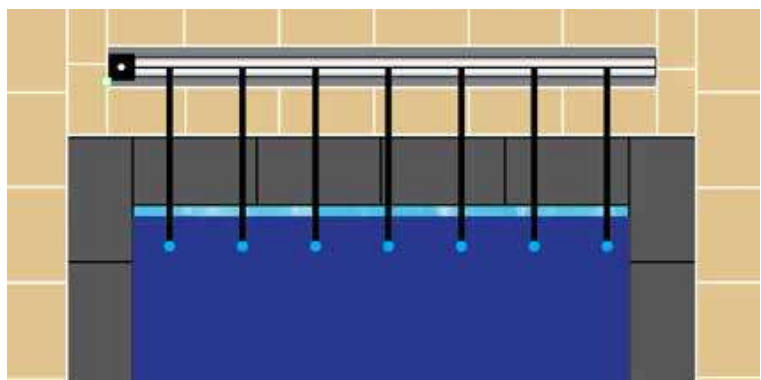

INSTALLATION

Checklist

- ☐ Drainage holes drilled in floor
- ☐ Screws connecting floor and walls
- ☐ Gearbox turning and keyway inserted
- ☐ Adequate number of straps attached
- ☐ Straps and clips assembled correctly
- ☐ Screws in tubes are located into each plastic slug
- ☐ Lid stands are attached and tighten
- ☐ Adequate number of hinges and evenly spaced
- ☐ Aluminium side plate screwed to rails
- ☐ Lid and rail are square and have correct gaps
- ☐ Lid and rails are free from scratches and marks
- ☐ Braces tightened and are spaced correctly
- ☐ Braces have adjustment bolts
- ☐ Lid spacers are fitted
- ☐ Handle and handle hooks fitted
- ☐ Add stickers

WARRANTY

Australian Consumer Law

Our goods come with guarantees that cannot be excluded under the Australian Consumer Law. You are entitled to a replacement or refund for a major failure and for compensation for any other reasonably foreseeable loss or damage. You are also entitled to have the goods repaired or replaced if the goods fail to be of acceptable quality and the failure does not amount to a major failure.

The Sunlover Underground Blanket Box is covered against manufacturer defects for:

Years	Product Part
1	Cover straps and clips
1	Outer lid and hinge
3	Gear box
5	Structure

This warranty does not apply if failure is due to any abuse, misuse, improper installation or accident

TECHNICAL AND AFTER SALES SUPPORT

For all enquiries please contact your local installer / distributor or contact Sunlover directly.

Contact Sunlover to find out more about our product range

Head Office

6-8 Austral Place
Hallam VIC 3803

T: 03 9887 2131

New South Wales

Unit 2, 10 Boden Road
Seven Hills NSW 2147

T: 02 9838 0000

Queensland

11 Andys Court
Upper Coomera QLD 4209

T: 07 5679 6821

